


Installation Instructions and Reference Handbook



GC-1F Generator Controller

4189340472D

SW 1.1X.X

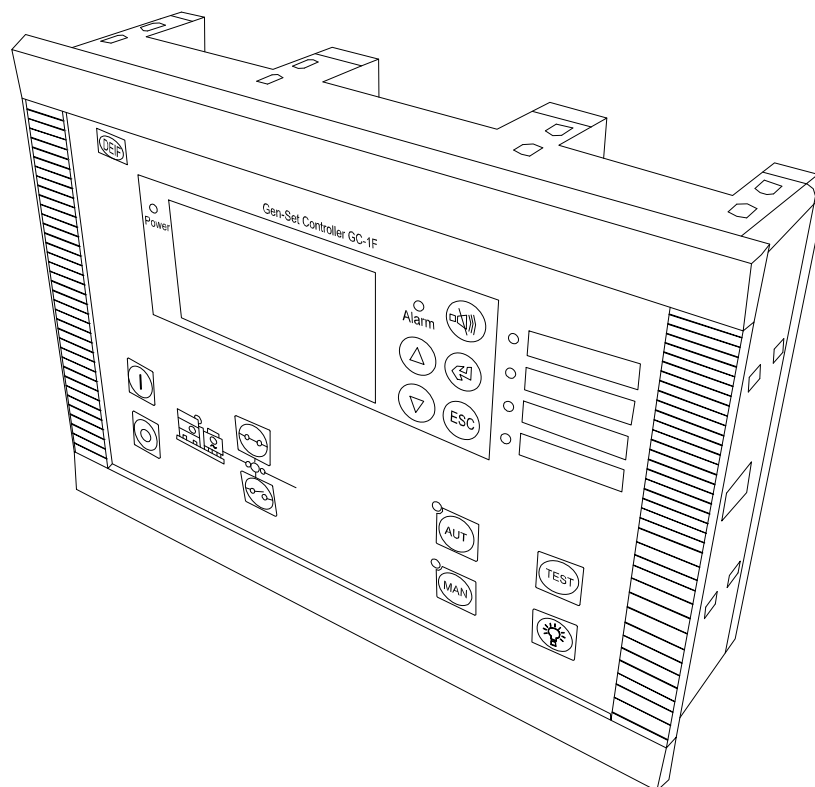

- *Installation instructions*
- *Functional descriptions*
- *Parameter list*



Table of contents

1. ABOUT THIS DOCUMENT.....	4
GENERAL PURPOSE	4
INTENDED USERS	4
CONTENTS/OVERALL STRUCTURE.....	4
2. WARNINGS AND LEGAL INFORMATION	6
LEGAL INFORMATION AND RESPONSIBILITY	6
ELECTROSTATIC DISCHARGE AWARENESS	6
SAFETY ISSUES	6
FACTORY SETTINGS	6
DEFINITIONS	6
3. GENERAL PRODUCT INFORMATION.....	7
INTRODUCTION	7
TYPE OF PRODUCT	7
STANDARD FUNCTIONS.....	7
OPTIONS	8
4. INSTALLATION INSTRUCTIONS	9
MOUNTING.....	9
TERMINALS	9
WIRING	12
BINARY INPUTS.....	13
CHARGER ALTERNATOR CONNECTIONS	14
CONNECTION OF THE 3-PHASE VOLTAGE AND CURRENT	14
CONNECTION OF THE 3-PHASE VOLTAGE AND CURRENT	15
CONNECTION OF THE 1-PHASE VOLTAGE AND CURRENT	15
CONNECTION OF THE SPLIT-PHASE VOLTAGE AND CURRENT	16
TECHNICAL INFORMATION	17
5. PUSH-BUTTONS, LEDS AND DISPLAY	20
UNIT	20
ICON LIST	24
6. FUNCTIONAL DESCRIPTIONS	28
ALARM FUNCTION	28
TIMER FUNCTION	28
VOLTAGE UNBALANCE DETECTION	29
PHASE SEQUENCE ERROR	29
UTILITY SOFTWARE INPUT CONFIGURATION	29
OUTPUT FUNCTIONS	31
ALARM INDICATION LEDS	32
FAIL CLASS	36
SERVICE TIMERS	36
VDO SENSORS	37
BINARY INPUTS WITH CABLE SUPERVISION	41
FUEL PUMP LOGIC.....	41
4-20mA INPUTS	42
4-20mA INPUTS	43
GENERATOR BREAKER CONTROL.....	46
TEST FUNCTION.....	47
M-LOGIC.....	48
BUZZER.....	48
UTILITY SOFTWARE CONNECTION VIA MODEM	50
PC UTILITY SOFTWARE COMMUNICATION SAFETY.....	51
AUTO ENGINE START.....	52
START SEQUENCES	53

STOP SEQUENCES 58

7. PARAMETER LIST 60

PARAMETER GROUPS..... 60

SETUP 60

FAIL CLASS 63

ENGINE ALARM SETTINGS (PROTECTION) 63

BINARY INPUTS WITH CABLE SUPERVISION 66

4-20MA INPUTS 66

VDO INPUTS..... 68

RPM INPUT 69

Hz/V MONITORING SETTINGS 75

1. About this document

This chapter includes general user information about this handbook concerning the general purpose, the intended users, the overall purpose and the overall contents and structure.

General purpose

This document is the Installation Instructions and Reference Handbook for DEIF's Generator Controller, the GC-1F. The document mainly includes installation instructions, presentation of push-buttons, LEDs and display, functional descriptions and complete standard parameter lists.

The general purpose of the Installation Instructions and Reference Handbook is to provide the information needed to install the unit correctly and to provide information about the functionality of the unit and its applications. The handbook also offers the user the information he needs in order to successfully set up the parameters needed in his specific application.



Please make sure to read this handbook before working with the multi-line 2 controller and the gen-set to be controlled. Failure to do this could result in human injury or damage to the equipment.

Intended users

The handbook is mainly intended for the person responsible for installing the unit and for the person responsible for the unit setup. Naturally, others might also find useful information in the handbook.

Contents/overall structure

The Installation Instructions and Reference Handbook is divided into chapters and in order to make the structure of the document simple and easy to use, each chapter will begin from the top of a new page. The following will outline the contents of each of the chapters.

About this document

This first chapter includes general information about this handbook as a document. It deals with the general purpose and the intended users of the Installation Instructions and Reference Handbook. Furthermore, it outlines the overall contents and structure of the document.

Warnings and legal information

The second chapter includes information about general legal issues and safety precautions relevant in the handling of DEIF products. Furthermore, this chapter will introduce note and warning symbols, which will be used throughout the handbook.

General product information

The third chapter will deal with the unit in general and its place in the DEIF product range.

Installation instructions

This chapter includes the information needed to perform correct installation of the unit, e.g. mounting instructions, terminals, wiring, inputs etc.

Push-buttons, LEDs and display

This chapter deals with push-button and LED functions. Furthermore, information about the display including icon list is presented.

Functional descriptions

This chapter includes functional descriptions for the unit's standard functions. Screen dumps and flow charts are used in order to simplify the information.

Parameter list

This chapter includes a complete standard parameter list for setup. Therefore, this chapter is to be used for reference, when information about specific parameters is needed.

2. Warnings and legal information

This chapter includes important information about general legal issues relevant in the handling of DEIF products. Furthermore, some overall safety precautions will be introduced and recommended. Finally, the highlighted notes and warnings, which will be used throughout the document, are presented.

Legal information and responsibility

DEIF takes no responsibility for installation or operation of the generator set. If there is any doubt about how to install or operate the generator set controlled by the unit, the company responsible for the installation or the operation of the set must be contacted.

The units are not to be opened by unauthorised personnel. If opened anyway, the warranty will be lost.

Electrostatic discharge awareness

Sufficient care must be taken to protect the terminals against static discharges during the installation. Once the unit is installed and connected, these precautions are no longer necessary.

Safety issues

Installing the unit implies work with dangerous currents and voltages. Therefore, the installation should only be carried out by authorised personnel who understand the risks involved in working with live electrical equipment.



Be aware of the hazardous live currents and voltages. Do not touch any AC measurement inputs as this could lead to injury or death.

Factory settings

The unit is delivered with certain factory settings. Given the fact that these settings are based on average values, they are not necessarily the correct settings for matching the individual engine. Thus precautions must be taken to check the settings before running the engine.

Definitions

Throughout this document a number of notes and warnings will be presented. To ensure that these are noticed, they will be highlighted in order to separate them from the general text.

Notes



The notes provide general information which will be helpful for the reader to bear in mind.

Warnings



The warnings indicate a potentially dangerous situation which could result in death, personal injury or damaged equipment, if certain guidelines are not followed.

3. General product information

This chapter includes overall product information about the unit in general and its place in the DEIF product range.

Introduction

The concept of the GC-1F is to offer a simple and effective solution to gen-set builders, who need a flexible yet cost-competitive protection and control unit for small and medium-sized generators.

Type of product

The Generator Controller GC-1F is a microprocessor-based control unit containing all necessary functions for protection and control of a power generator. Besides the control and protection of the diesel engine it contains a full 3-phase AC voltage and current measuring circuit. The unit is equipped with an LCD display presenting all values and alarms.

Standard functions

Engine control

- Start preparation (preheating or prelubrication)
- Start/stop sequences with selectable number of start attempts
- Fuel solenoid selection (coil type)
- Idle speed control
- Local or remote start/stop
- Stop sequence with cooling down
- Running speed detection selectable
 - Generator Hz/V
 - Charger alternator input (W terminal)
 - Binary input (D+)
 - Oil pressure

Engine monitoring

- 3 configurable inputs, all selectable between
 - VDO or
 - 4-20mA from active transducer or
 - Binary with cable supervision
- 6 binary inputs, configurable
- RPM input, selectable
 - Magnetic pick-up
 - NPN or PNP pick-up
 - Tacho generator
 - Charger alternator W terminal

Generator monitoring

- 3-phase or single phase generator monitoring
 - Voltage/current/frequency/power/reactive power

Generator protection (ANSI)

- Over-/undervoltage (27/59)
- Over-/underfrequency (81)
- Overcurrent (51)
- Reverse power (32)

- Voltage unbalance (60)
- Phase sequence error (47)

Clear text display

- 128 x 64 pixel backlight STN
- Graphic symbol messaging
- Clear text alarm messages
- Clear text diagnostics for both hardwired inputs and CANbus messages (J1939)
- Log book holding 150 log entries
- Real time clock for time and date

Options

The basic GC-1F generator controller unit can be equipped with an AMF option needed to provide a real emergency power system controller. Furthermore, CANbus communication for different engine types is available and CANbus for up to two AOPs is possible at the same time. Also Modbus RS485 is available as an option.



A full options list is included in the data sheet.

4. Installation instructions

This chapter includes the information needed to perform correct installation of the unit, e.g. mounting instructions, terminals, wiring, inputs etc.

Mounting


The unit is designed for flush mounting by means of 4 fixing clamps (IP52), which are included at delivery. To have the IP65 (12 fixing clamps) the unit must be ordered with option L. The two fixing clamps on each side are mounted on the top and bottom of the GC-1F box.



Chapter 4 includes detailed information on switchboard cutout and unit dimensions.

Terminals

Unit rear view

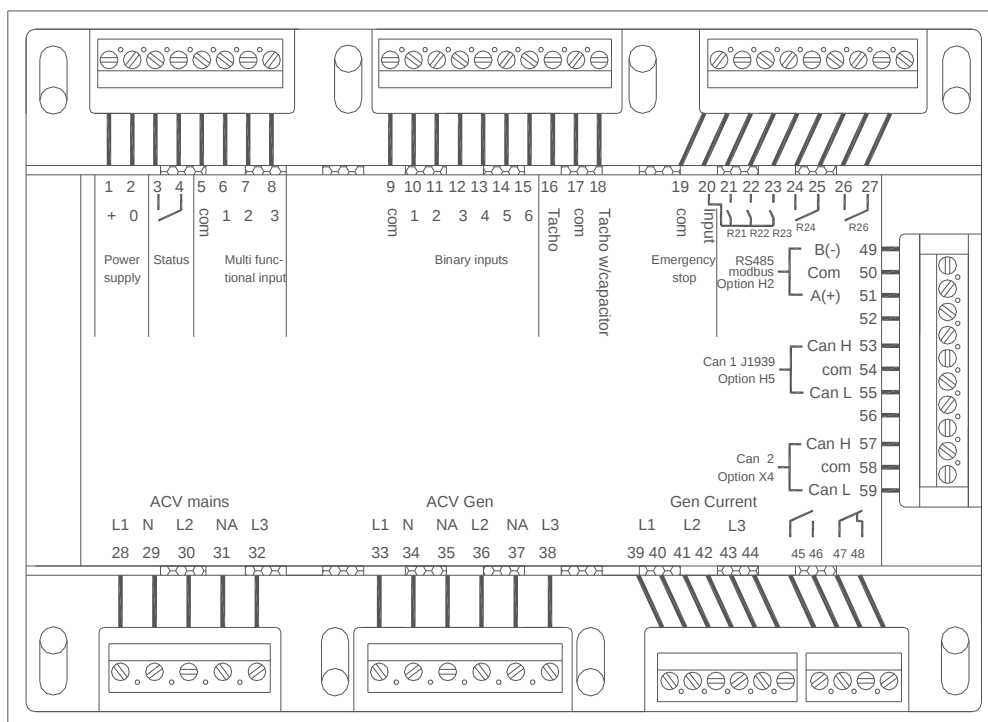

The RJ11 connector for the PC connection interface box is placed on the side of the unit.

Terminal description

For the relay outputs the following terms will be used:



NO means Normally Open.

NC means Normally Closed.

Com. means common terminal for the individual relay.

Term.	Technical data	Description
1	Power supply +	6...36V DC (UL/C-UL: 7.5...32.7V DC)
2	Power supply –	GND
3-4	Status out. Contact ratings 1A 24V DC/V AC Resistive	General status output for marine approvals
9	Common	Common for term. 10...15
10	Digital input	Start enable/configurable
11	Digital input	Remote start/stop/configurable
12	Digital input	Charge alternator D+ (running)/configurable
13	Digital input	Configurable
14	Digital input	Coolant temperature/configurable
15	Digital input	Oil pressure/configurable
19	Common	Common for emergency stop term. 20
20	Emergency stop and common for 21...23	Common for relay 1, 2 and 3 and input for emergency stop*
21	Relay output 21. Contact ratings 2A 30V DC/V AC (UL/C-UL: 1A Resistive)	Start prepare/configurable. Function NO
22	Relay output 22. Contact ratings 2A 30V DC/V AC (UL/C-UL: 1A Resistive)	Starter (crank)/configurable. Function NO
23	Relay output 23. Contact ratings 2A 30V DC/V AC (UL/C-UL: 1A Resistive)	Run coil /configurable. Function NO
24-25	Relay output 24. Contact ratings 8A 30V DC/V AC (UL/C-UL: 6A Resistive)	Horn/configurable. Function NO
26-27	Relay output 26. Contact ratings 8A 30V DC/V AC (UL/C-UL: 6A Resistive)	Alarm/configurable. Function NO
Multi-functional inputs		
5	Common	Common for term. 6...8
6	VDO1/4...20mA/binary input	Fuel level/configurable
7	VDO2/4...20mA/binary input	Oil pressure/configurable
8	VDO3/4...20mA/binary input	Water temp./configurable
Tacho RPM input		
16	RPM input	Magnetic pick-up/tacho generator
17	RPM-GND	Common for RPM input
18	RPM input W	Magnetic pick-up. PNP, NPN or charge alternator W terminal
3-phase generator voltage input		
33	Gen. voltage L1	Generator voltage and frequency
34	Gen. neutral	
35	Not used, must not be connected	
36	Gen. voltage L2	
37	Not used, must not be connected	
38	Gen. voltage L3	
3-phase generator current input		
39	Gen. current L1, s1	Generator current
40	Gen. current L1, s2	
41	Gen. current L2, s1	
42	Gen. current L2, s2	
43	Gen. current L3, s1	
44	Gen. current L3, s2	

Optional 3-phase mains voltage inputs		
28	Mains voltage L1	
29	Mains voltage neutral	
30	Mains voltage L2	
31	Not used, must not be connected	
32	Mains voltage L3	
Breaker relays		
45	Relay R45 Contact ratings 2A 30V DC/250V AC (UL/C-UL: Contact ratings 2A 30V DC/30V AC)	Generator circuit breaker/configurable, function NO (normally open).
46	Relay R45	
Optional relay for closing mains breaker (option B3)		
47	Relay R47 Contact ratings 2A 30V DC/250V AC (UL/C-UL: Contact ratings 2A 30V DC/30V AC)	Mains circuit breaker/configurable, function NC (normally closed). Option B3.
48	Relay R47	
Optional Modbus RS485 interface (option H2)		
49	B (-)	Modbus RS485 RTU or ASCII
50	GND	
51	A (+)	
Optional CANbus engine interface		
53	CAN-H	CAN J1939 engine communication
54	CAN-GND	
55	CAN-L	
Optional CANbus AOP-2 interface (option X4)		
57	CAN-H	CAN communication line to AOP-2
58	CAN-GND	
59	CAN-L	

* If terminal 20 is used for emergency stop, please see wiring diagram on page 12.

** The status relay is the uP watchdog output. This relay is normally energised, and the switch is closed after power-up. If the uP fails or the power is lost, the relay will deenergise and the switch will open. If the unit fails to start up at power-up, then the relay switch will remain open.

The binary output functions are configurable via the PC utility software and can be configured to cover the following functions:

- Alarm/limit
- Engine running
- Horn
- Idle speed
- Not used
- Start prepare
- Run coil
- Starter
- Stop coil
- Engine heater
- Stop coil (not acc. in start seq.)

It is possible to choose run coil on one relay and stop coil on another, thus supporting engines with double systems.

The multi-functional inputs can be configured to cover the following functions:


- VDO sensor input
- 4...20mA input
- 0...20mA input
- Binary input with the possibility of cable supervision

Tacho RPM input can be configured to cover the following functions:

- Magnetic pick-up (2-wire)
 - W terminal on charger alternator
 - NPN or PNP pick-up*
- * These RPM inputs require external equipment.

The generator voltage and current input can be configured to the following:

- Voltage 100...25000V primary
- Current 5...9000A primary

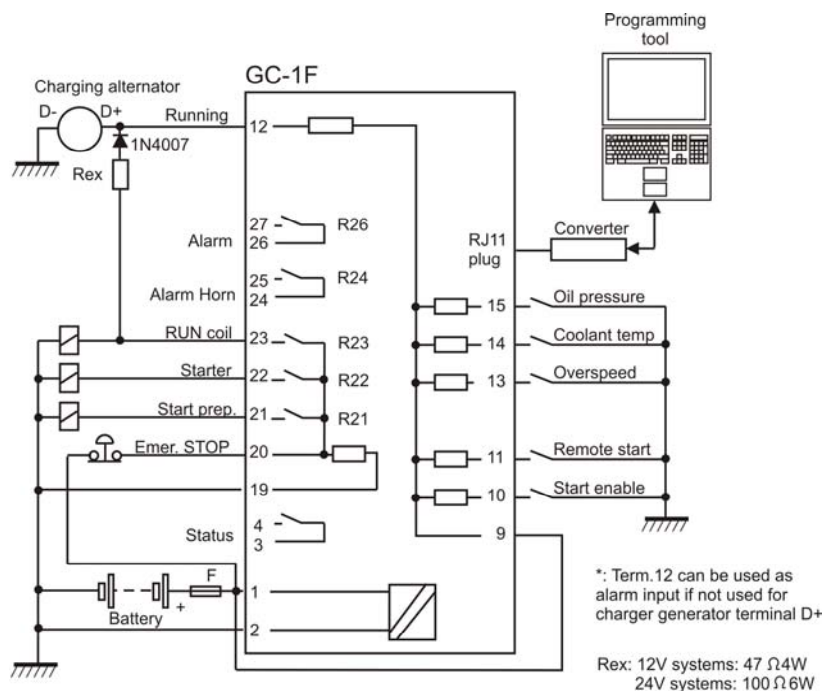

Wiring

Engine communication option H5	Modbus RTU option H2	CAN bus for AOP2 option X4
Multi-functional inputs VDO sensors	Multi-functional inputs 4-20 mA transmitters	Multi-functional inputs Binary input w. cable superv.
Tacho input Magnetic pickup/ Tacho generator	Tacho input NPN/PNP pickup	Tacho input W input from charger alternator



If a stop coil is used, the REX resistor can be connected to the starter relay (crank).




The illustrated configuration is the default factory setting. The use of the relays can be chosen freely.



It is important to protect the unit against damage caused by high voltages. Therefore, the fuse must not be more than 2A.

Binary inputs

All binary inputs are 12/24V DC bi-directional optocoupler type. The typical wiring is illustrated below:

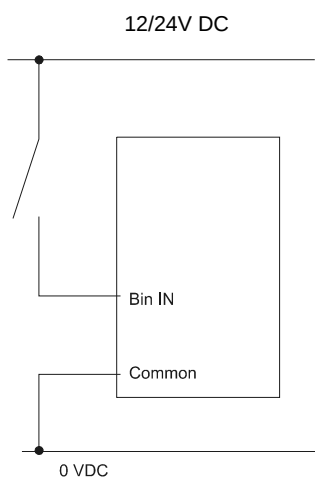

The binary inputs use fixed signals. Only the mode shift input and the test input (if the timer is used) use pulse signal.


Charger alternator connections

The charger alternator can be connected in 2 different ways:

- 1) Using the D+ terminal connected to terminal 12
- 2) Using the W terminal connected to the RPM input



Usually only one of these possibilities is used.

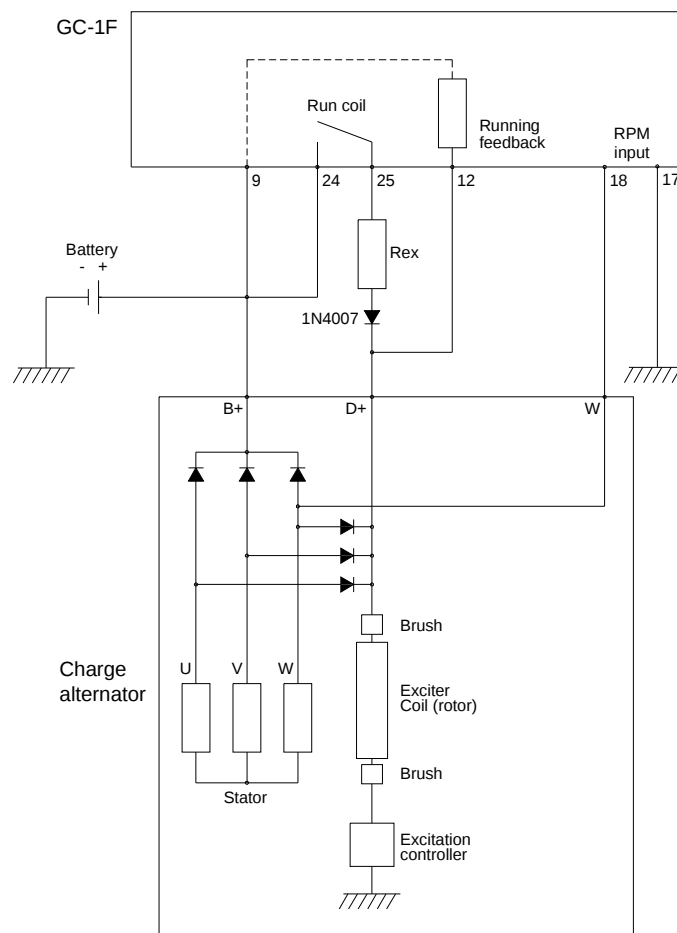

Rex: Excitation resistor

12V systems: 47Ω 4 W

24V systems: 100Ω 6 W


At standstill the battery + is connected to terminal 9 (common), and a current flows to terminal 12 and via the D+ input on the alternator to ground (battery -). When the starter is engaged (cranking), the battery will supply the D+ through the REX resistor, helping the alternator to excite. When the alternator starts to produce voltage (excitation OK), the speed of the alternator will be above running speed, and the voltage on term. 12 will rise to a value higher than the battery voltage and then interrupt the current flow through REX and activate the running feedback input. Engine is running.




If a stop coil is used, the REX resistor can be connected to the starter relay (crank).

Connection of the 3-phase voltage and current


Wiring, AC interface

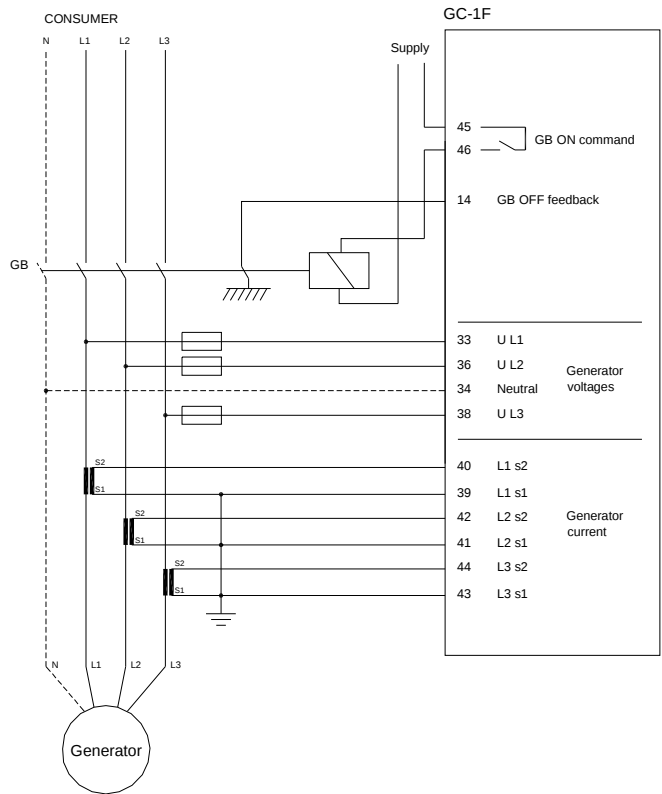

Connection of the 1-phase voltage and current

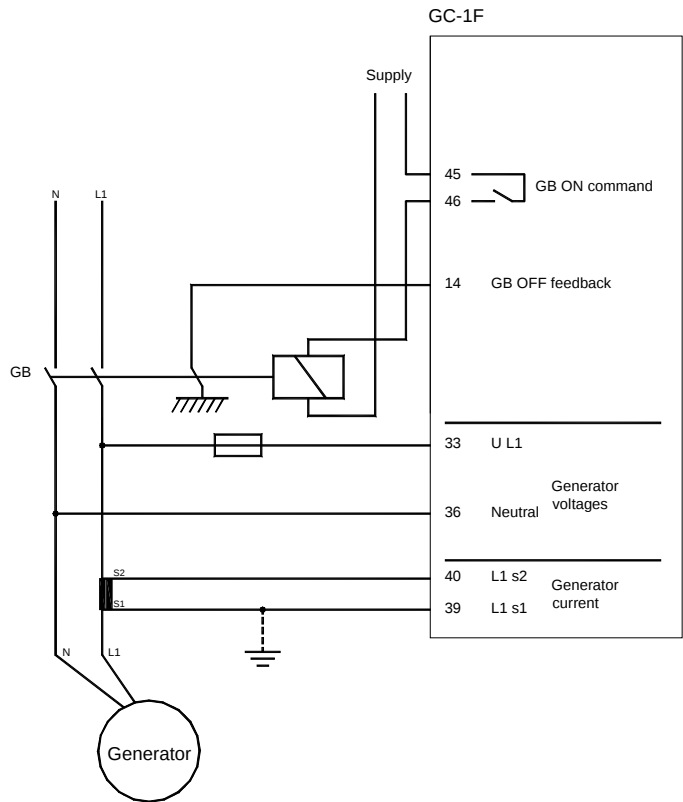

Connection of the split-phase voltage and current

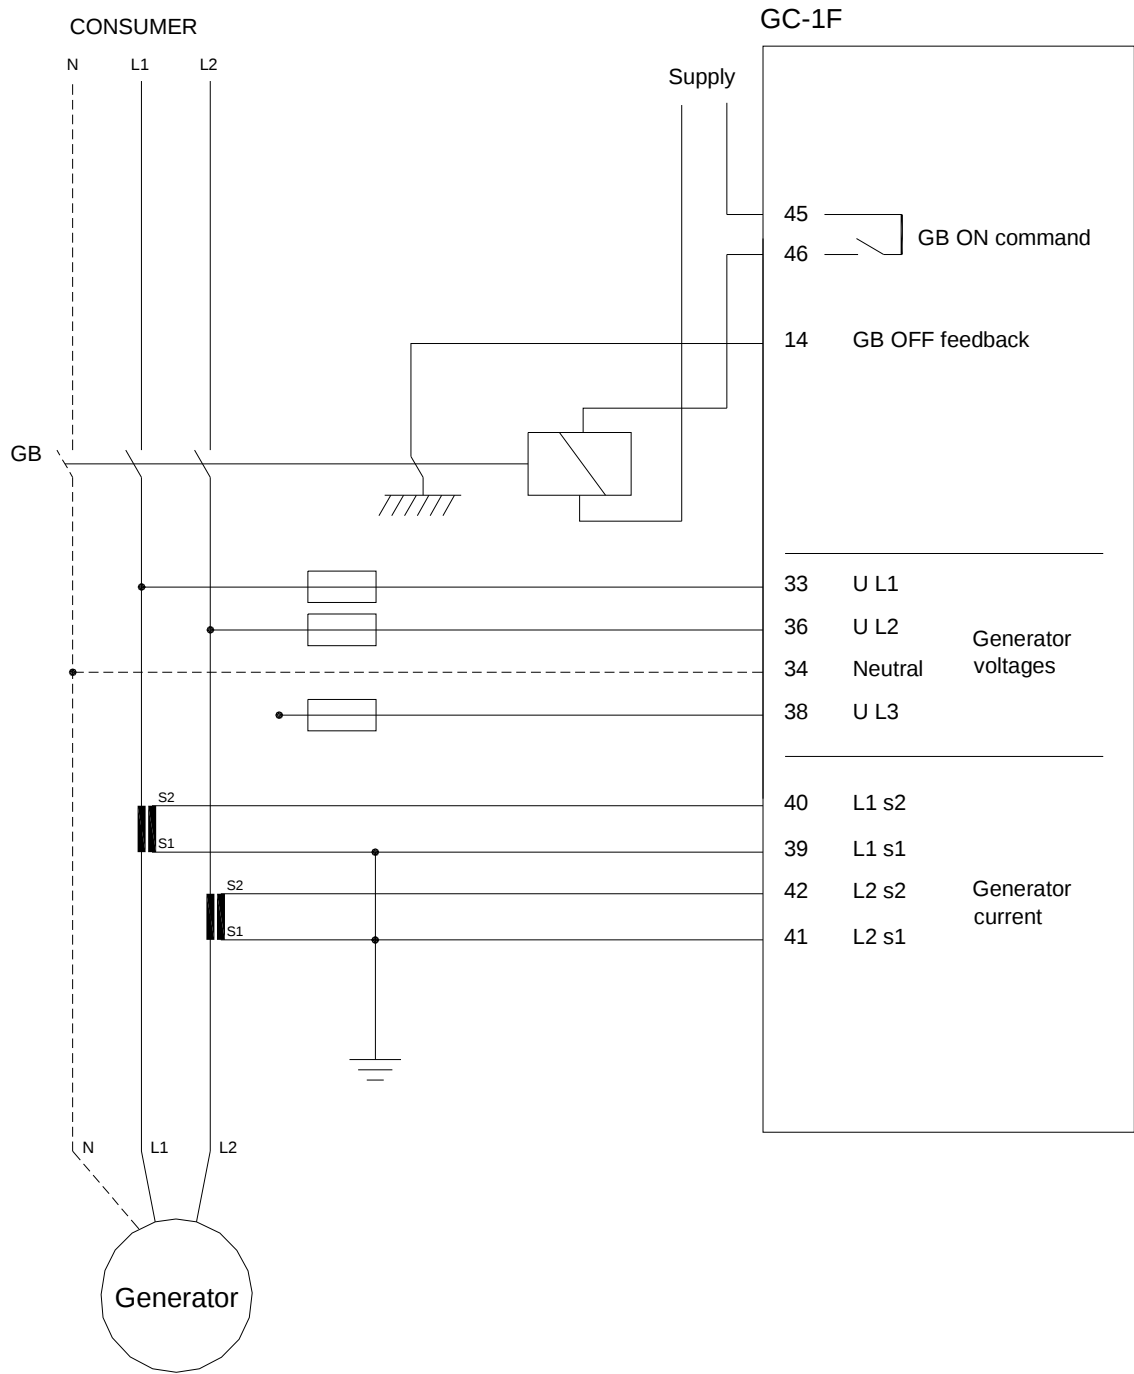

Technical information

Technical specifications

Accuracy:	Class 2.0 to EN 60688/IEC 688
Galvanic separation:	Between inputs and aux. power supply: 500V DC – 1 min.
Connections:	1.5 mm ² multi stranded
Operating temperature:	-20...70°C (-4...158°F) (UL/C-UL: Max. 50°C ambient)
Storage temperature:	-40...70°C (-40...158°F)
Aux. supply:	6-36V DC (UL/C-UL: 7.5...32.7V DC) continuously Max. 8W consumption
Measuring input voltage:	50...480V AC phase to phase (+20%)
Load:	1.5MΩ
Measuring input current (In):	/1A or /5A AC from current transformer
Load:	Max. 0.3VA per phase
Frequency:	30...70Hz
Analogue input:	From active transducer
Current:	(0)4...20mA
Impedance:	50Ω
	Cable supervision: I < 3mA = Fault
	Response times: 500ms

(From the set point is reached till the output is activated or the delay timer is started).


Multi inputs:	Resistor inputs, internal 3V supply
	Cable supervision: R > 150Ω = Wire break
	Response times: 500ms

(From the set point is reached till the output is activated and the delay timer is started).

Active binary inputs:	Dry contact inputs with cable supervision
Internal voltage:	3V DC
Impedance:	240Ω ~ 16mA
RPM input:	2.0...70V 10...10,000Hz
Passive binary in voltage:	Bi-directional optocoupler 6...36V DC

Relay outputs:	3 relays (R21-R23): 30V DC/AC 2A (UL/C-UL: 1A Resistive) 2 relays (MB & GB): 250V AC 30V DC 2A (UL/C-UL: 2A Resistive) 2 relays (R24 & R26): 30V DC/AC 8A (UL/C-UL: 6A Resistive) 1 status relay: 24V DC 1A Resistive
Mounting:	Panel mounted
Size:	160 x 220mm
EMC/CE:	To EN 61000-6-1/2/3/4 SS4631503 (PL4) and IEC 255-3
Material:	All plastic materials are self-extinguishing according to UL94
Plug connections:	AC voltage inputs: 3.5 mm ² multi stranded (13 AWG) Other: 1.5 mm ² multi stranded (16 AWG)
Tightening torque, min.:	AC voltage input: 0.5Nm Other: 0.5Nm
PC connection:	RS232 converter box (option J5)
Approval:	CE & C-UL
Weight:	Approx. 0.9 kg (2.0 lbs)
UL/C-UL demands:	Use 60/75°C copper conductors only Main disconnect must be provided by installer Installed in accordance with the NEC (United States) or the CEC (Canada) Use listed or R/C (XODW2,8) current transformers

Unit dimensions and panel cutout

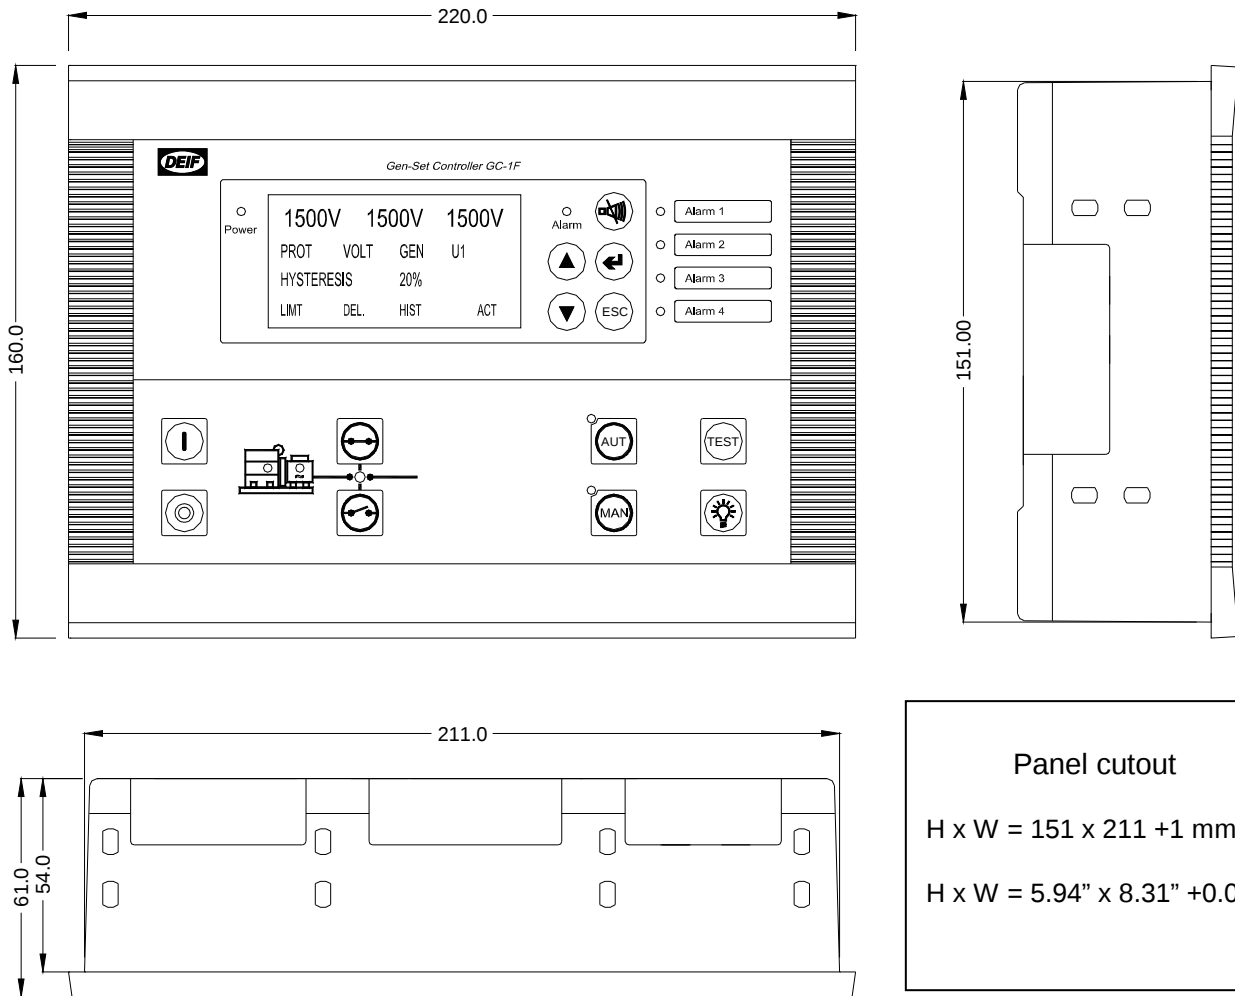

5. Push-buttons, LEDs and display


This chapter deals with the display including the push-button and LED functions.

Unit

Front dimensions H x W	160 x 220 mm (6.30" x 8.66")
Unit depth	54 mm (2.13")

Push-button functions

The push-buttons on the unit have the following functions:

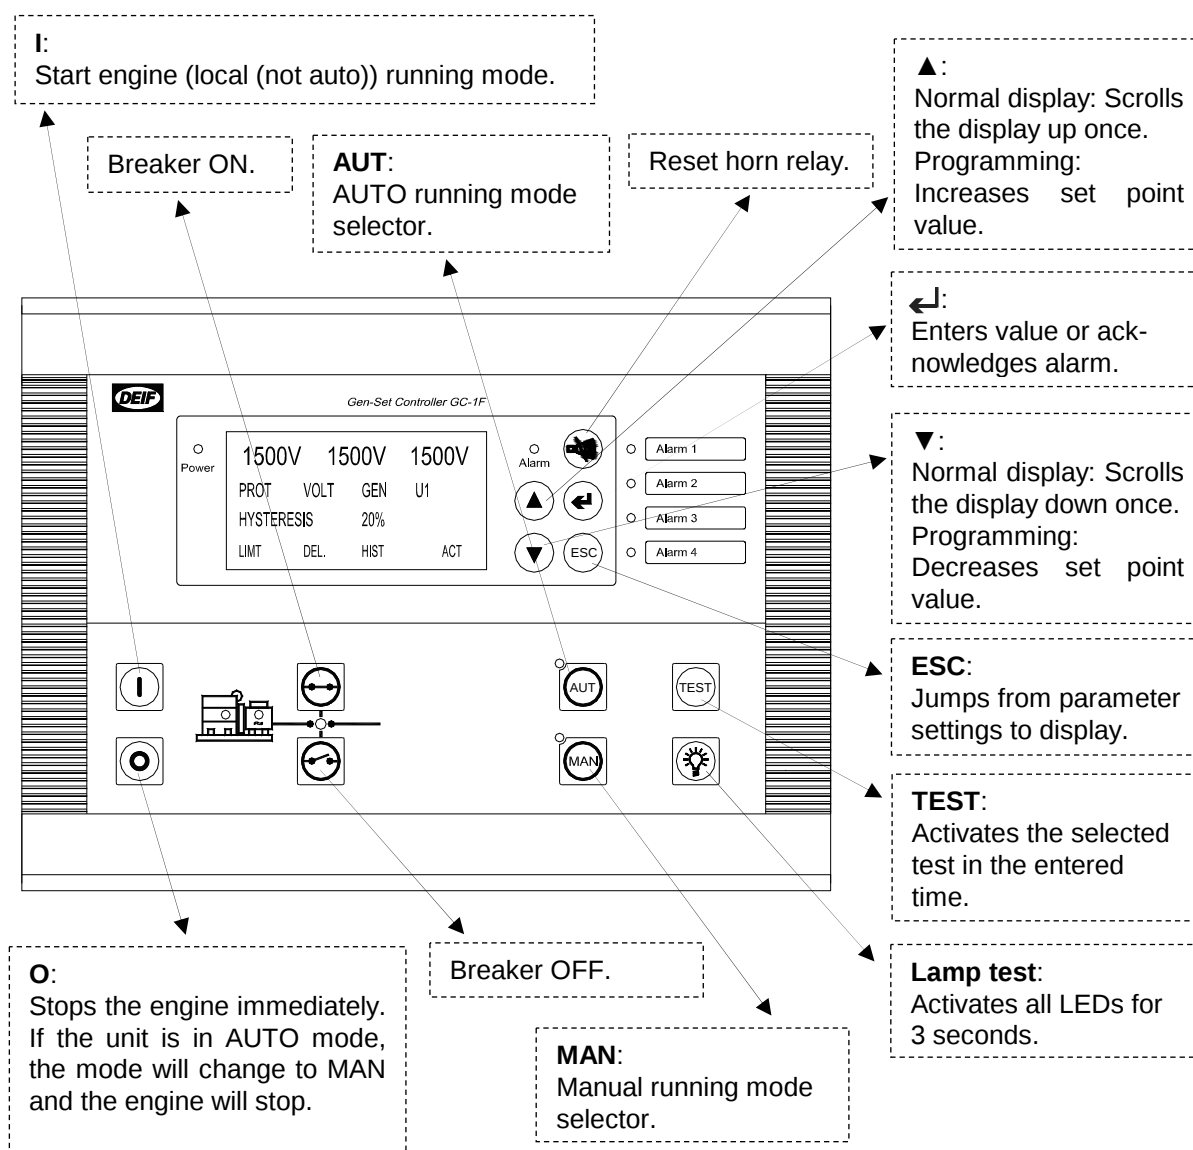

I: Start engine (local (not auto)) running mode.

O: Stops the engine instantaneously. If the unit is in AUTO mode, the mode will change to MANUAL and the engine will stop.

AUT: AUTO running mode selector.

MAN: Manual running mode selector.

TEST: Initiates the test sequence selected for the push-button.



Lamp test: One push will illuminate all LEDs for 3 seconds.

ESC: Jumps from parameter settings to display. Removes pop-up messages.



Horn reset: Resets horn relay. Press 2 seconds to jump to the alarm list.



Normal display: Scrolls the display up once. **Programming:** Increases set point value.



Normal display: Scrolls the display down once. **Programming:** Decreases set point value.



Enter value/acknowledge alarm:




Breaker closes:



Breaker opens:

LED functions

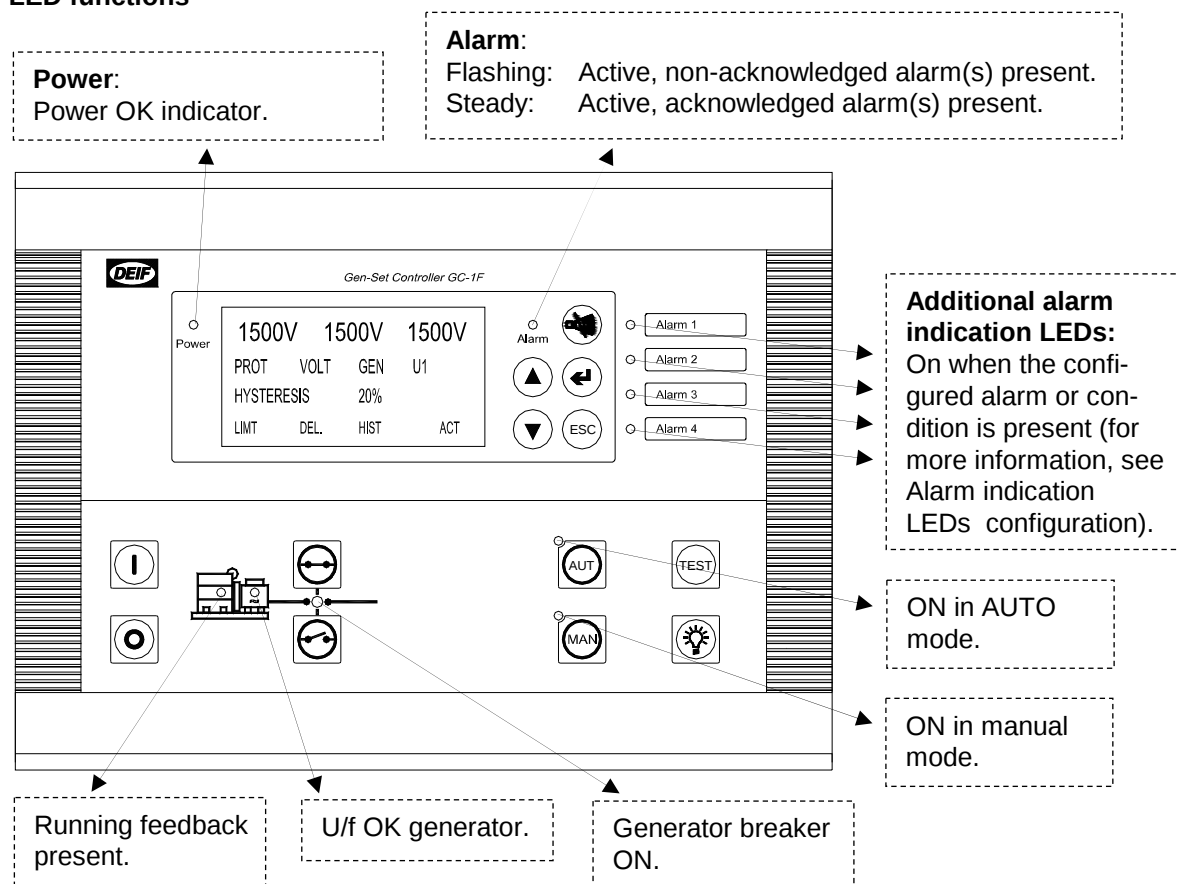

Power: Power OK indicator.

Alarm: Flashing (red): Active, non-acknowledged alarm(s) present (factory setting).
Steady (red): Active, acknowledged alarm(s) present (factory setting).

The alarm LED can also be adjusted to:

Flashing (red): Active, non-acknowledged shutdown alarm(s) present.
Steady (red): Active, acknowledged shutdown alarm(s) present.
Flashing (amber): Active trip stop alarm, trip GB alarm or warning non-acknowledged alarm(s) present.
Steady (amber): Active trip stop alarm, trip GB alarm or warning acknowledged alarm(s) present.




This is adjusted in parameter 6940.

Additional alarm


indication LEDs: Flashing or steady light in the colour configured in M-logic when the defined logic line(s) is (are) true.

Display functions


The display indicates both readings and alarms. Illustrated below are examples with icons and English language.

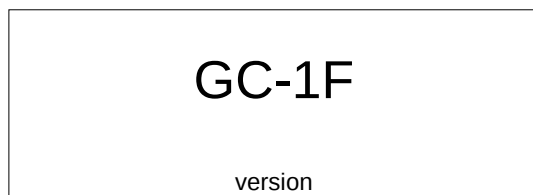

Type and software version.

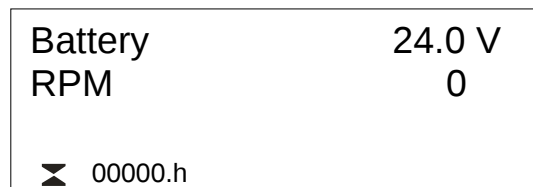


Battery voltage, RPM and running hours counter.

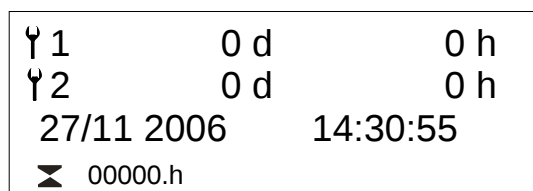


Service timer 1 and 2.

Date and time.

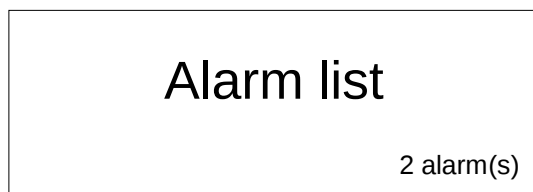


Press $\leftarrow$ to enter the list of active alarms.

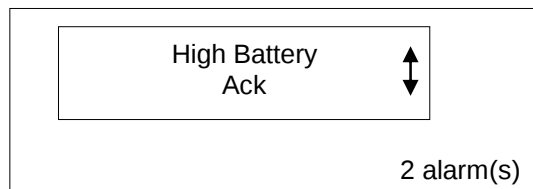

Active alarm list. The alarm list pops up automatically, when an alarm appears. When the arrow is present, more alarms are active. Press $\blacktriangledown$ to scroll through the list. Exit the list by pressing ESC.



Press $\leftarrow$ to enter the parameter setting.

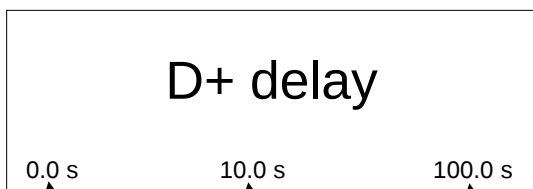

Min. value

Actual value

Max. value

Parameter example: D+ delay setting. Use $\blacktriangle$ or $\blacktriangledown$ to scroll through the settings list. If change of settings is necessary, press $\leftarrow$ and enter the password. Then use $\blacktriangle$ or $\blacktriangledown$ to change values. Use ESC to leave settings.



The available parameters depend on the set options. Some parameters can only be changed using the PC utility software (USW) for GC-1F. The parameter list will automatically be abandoned, if no button is pressed during a 30 sec. period.

Icon list




The list covers all available icons including those related to the engine communication.

	Warning list	Icon
1	Low oil pressure warning	
2	EIC temp. lube oil	
3	High coolant temp. warning	
4	High intercooler temp.	
5	Defect coolant level switch	
6	EMR warning	
7	JDEC warning	
8	Oil pressure	
9	Intake manifold	
10	Coolant temperature	
11	Fuel injection pump	
12	EI comm. error	
13	EIC warning	
14	Stop limit exceeded	
15	EMS warning	
16	Charge gen.	

	Shutdown list	Icon
17	Overspeed shutdown	
18	Low oil pressure shutdown	
19	EIC temp. lube oil	
20	Low coolant level shutdown	
21	High coolant temp. shutdown	
22	High oil temp. shutdown	
23	High charge air temp. shutdown	
24	High coolant temp. shutdown	
25	EMR shutdown	
26	JDEC shutdown	
27	Fuel temperature	
28	Fuel control valve	
29	ECU failure	
30	EIC shutdown	
31	EMS shutdown	

	Analogue readings	Icon
32	EIC speed	
33	EIC coolant temp.	
34	EIC oil pressure	
35	EIC faults	
36	EIC oil temp.	
37	EIC fuel temp.	
38	EIC boost pressure	
39	EIC air inlet temp.	
40	EIC coolant level	
41	EIC fuel rate	
42	EIC charge air pressure	
43	EIC charge air temp.	
44	EIC air inlet pressure	
45	EIC exhaust gas temp.	
46	EIC engine hours	
47	EIC oil f. diff. press.	
48	EIC battery voltage	
49	EIC fuel del. press.	

50	EIC oil level	
51	EIC crankcase press.	
52	EIC coolant pressure	
53	EIC water in. fuel	

6. Functional descriptions

This chapter includes functional descriptions for the unit's standard functions. Screen dumps and flow charts are used in order to simplify the information.

Alarm function

The unit will detect and display individual alarms which are enabled. Furthermore, it is possible to activate relays for alarm purposes. The alarms can be configured to any of the available relay outputs. Each alarm function has two output settings, namely output A and output B.

Alarms can be acknowledged in one of two ways: Either the binary input "alarm ack." (selectable to be one of the binary inputs 10, 11, 12, 13, 14 and 15) is used, if this is configured for alarm acknowledge, or the select button on the display is used:


- The alarm acknowledge input acknowledges all present alarms, and the alarm LED will change from flashing to steady light.
- The display can be used in the alarm information window. The alarm information window displays one alarm at a time and the alarm state whether the alarm is acknowledged or not. If it is unacknowledged, then press $\leftarrow$ to acknowledge it. Use the $\blacktriangle$ and $\blacktriangledown$ push-buttons to scroll in the alarm list.

The alarm LED will be flashing, if unacknowledged alarms are present. The alarm relay will deactivate, when the alarm situation is reset and the alarm is acknowledged.

Timer function

The delay settings are all of the definite time type, i.e. a set point and time is selected.

If the function is e.g. overspeed, the timer will be activated, if the set point is exceeded. If the RPM value goes below the set point value before the timer runs out, then the timer will be stopped and reset.

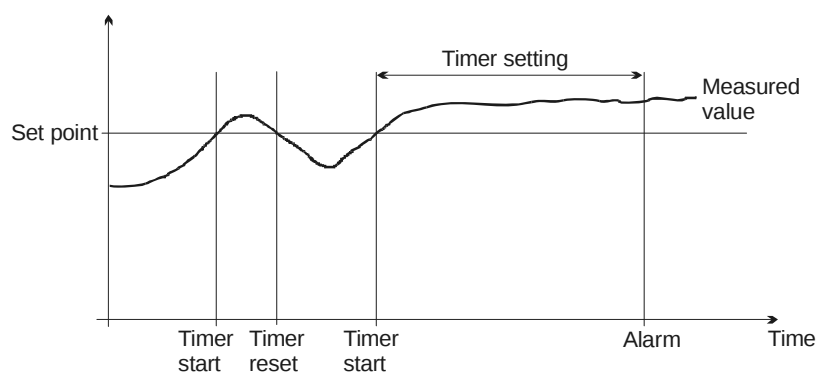

When the timer runs out and the alarm is present, the output is activated.

Voltage unbalance detection

The formula for voltage unbalance is:

$(\text{Most deviating line-to-line voltage} - \text{average voltage}) \times 100 / \text{average voltage}$ (nominal value in %)

Phase sequence error

Prior to closing a breaker the unit checks that the phase sequence is correct (L1-L2-L3). If it is incorrect (reversed) an alarm will be issued and the breaker in question (generator or option B3 mains breaker) will not be closed.

Utility software input configuration

It is possible to configure the inputs indicated in the table. The unit has a number of passive binary inputs (input terminals 10-15).

Input function	Comment
Test run	Configurable
Alarm acknowledge	Configurable
Parameter shift (secondary parameters)	Configurable
Start enable (OFF = start blocked)	Configurable
GB Pos on	Configurable
GB Pos off	Configurable
MB Pos on	Configurable (option B3)
MB Pos off	Configurable (option B3)
Access lock	Configurable
Mode shift (auto/manual)	Configurable
Fire pump (shutdown override)	Configurable
Remote start/stop	Configurable
D+ (digital running feedback)	Configurable
Digital inputs no. 1...6 used as alarms	Configurable
Idle speed	Configurable
Inhibit EI alarms	Configurable (option H5)

Input function description

1. Test run

When the test input is activated, the selected test sequence will start. Please see the test function description for further information.

2. Alarm acknowledge

Acknowledges all present alarms.

3. Start enable

This input must be activated to start the engine.

4. GB Pos on

When this input is activated, the GC-1F sees the generator breaker as closed. If the GB on and the off feedback are on or off simultaneously, a GB position failure is displayed.

5. GB Pos off

When this input is activated, the GC-1F sees the generator breaker as open. If the GB on and the off feedback are on or off simultaneously, a GB position failure is displayed.

6. MB Pos on

When this input is activated, the GC-1F sees the generator breaker as open. If the MB on and the off feedback are on or off simultaneously, an MB position failure is displayed.

7. MB Pos off

When this input is activated, the GC-1F sees the generator breaker as open. If the MB on and the off feedback are on or off simultaneously, an MB position failure is displayed.

8. Access lock

Activating the access lock input deactivates the control push-buttons on the display. It will be possible to change parameters and view measurements, alarms and the log.

9. Mode shift

Selection between manual and auto running. The mode is changed every time the input is activated (pulse input).

10. Fire pump (shutdown override)

Deactivates all protection functions except overspeed and emergency stop protection.

11. Remote start/stop input

Activating this input will start the gen-set. Deactivating it will stop the gen-set after cool down (auto mode only).

12. D+ (digital running feedback)

This input is used as a running indication of the engine. When the input is activated, the start relay is deactivated. Input for running feedback from charge generator +D terminal. (Runs when charger U > battery voltage).

13. Digital inputs 1...6

These inputs are configurable as alarm inputs.

14. Idle speed

Activating the idle speed input holds the engine at idle speed for as long as it is set.

15. Inhibit EI alarms

When this input is active, it will inhibit all engine interface (option H5) alarms.



If nominal setting is going to be selected by a binary input, M-logic must be used.

Output functions

It is possible to configure the output functions indicated in the table. The unit has 7 configurable relay outputs (output terminals 20-27 and 45-48).

Input function	Comment
Alarm/limit	Factory setting Relay 26
Engine running	
Horn	Factory setting Relay 24
Idle speed	
Prepare	Factory setting Relay 21
Run coil	Factory setting Relay 23
Starter	Factory setting Relay 22
Stop coil	
External heater	
Stop coil (not acc in start seq.)	
Generator breaker	Factory setting Relay 45
Mains Breaker	Factory setting Relay 47



Relay 21/22/23/24/25/26 can not be configured as MB or GB



Relay 47 is closed when deenergised, but works as all other relays when GC-1F is powered up.

Output function description

1. Alarm/limit

When this setting for the relay is selected, the relay can be used in the alarm parameters in the setting Output A and Output B. This means that with factory settings the relay 2 can be used in the parameters as an alarm relay. If the relay is preferred to be a Limit relay, this selection must be done in the parameter list parameter 5000 to 5060.

2. Engine running

If a relay is configured to this function, this relay will close when a running feedback is detected. The relay will open again when the engine stops.

3. Horn

The horn relay is a common alarm output. This means that every time an alarm state appears the horn relay will close for the time configured in the parameter 6130 Alarm horn regardless of fail class. If 6130 is set to 0 seconds, it will be on until the reset horn push-button is activated or the alarm(s) has (have) been acknowledged.

4. Idle speed

This relay will close to give the engine governor the idle command (Low speed).

5. Prepare

This function will close the relay as the first thing in the start sequence. The relay will be closed for the time programmed in parameter 6181. This function is used for preheating the engine or for prelubrication.

6. Run coil

The relay configured to Run coil will be closed the entire time the engine is supposed to run.

7. Starter

The relay configured to Starter will be closed for the time selected in parameter 6184 in the start sequence of the GC-1F.

8. Stop coil

This relay will close to stop the engine, and when no running feedback is present it will stay closed in the ext. stop time (parameter 6212).

9. External heater


The relay configured to External heater will close when the temperature is below the set point in parameter 6320 and open again when the temperature is above the set point in parameter 6330. For more information, see the description of the function.

10. Stop coil (not acc. in start seq.)

The relay configured to this function will do the same as the normal stop coil with one exception: It will not close between the start attempts.

Alarm indication LEDs


Alarm indication LEDs are the 4 LEDs placed in the right side of the front label on the GC-1F. In the clear window next to the LEDs a label can be placed to explain the function of the LEDs. No label is provided from the factory. The label can be written on an overhead projector sheet and can be used with the print template on the cd-rom.

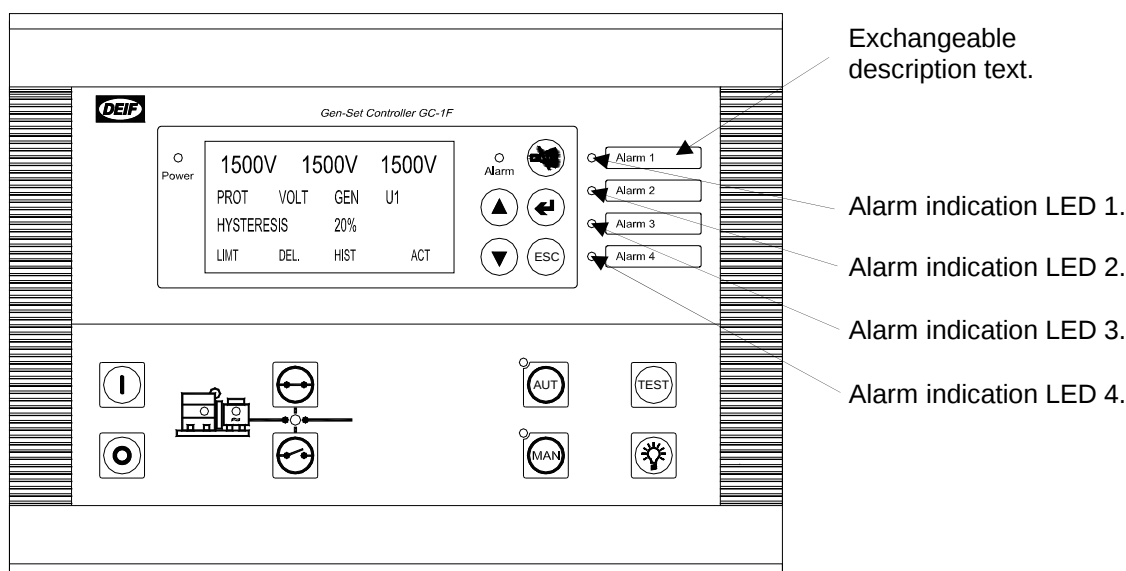

Configuration of the alarm indication LEDs

The configuration of alarm indication LEDs is done from M-logic. This means the LEDs can have three different colours, i.e. red, green or red flashing or steady light. The LEDs can be activated by all the different input functions available in M-logic.


In the screen dump, the alarm LED 1 is configured to light up green when the engine is running.

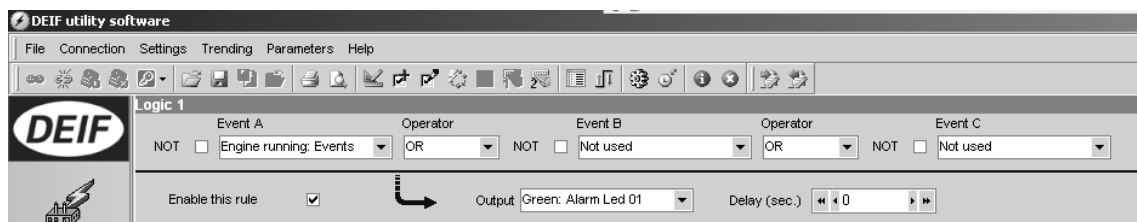


Configuration of the digital inputs

The digital inputs are configured via the utility software (USW).

Use this button to upload the menu.

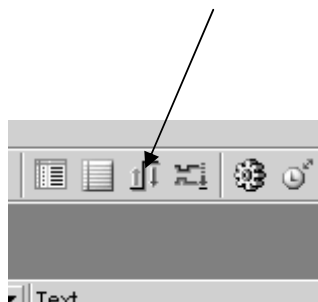


Remember to write the settings to the unit.

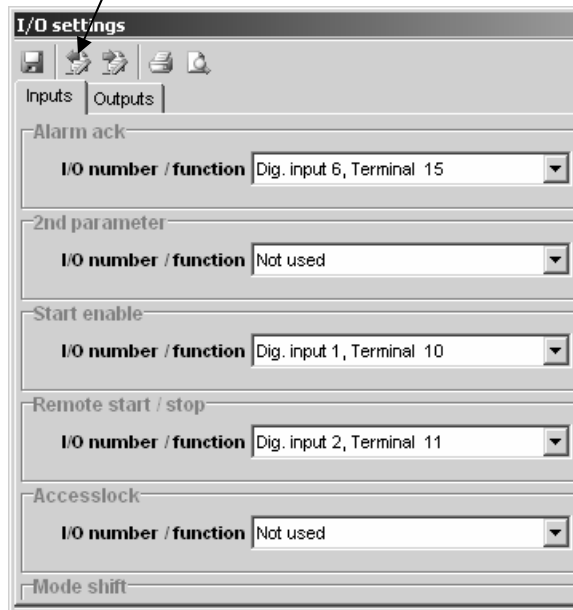



The individual I/O number and the function are now selected. In the example below 'Digital input 1' is chosen, and a terminal number must be assigned to the input. If the input is used as alarm input, then the name can be changed to the relevant name selected from the predefined list below.

First, 'Digital input 1' is selected from parameter no. 3000-3050 Digital input term. 10-15, no cable supervision

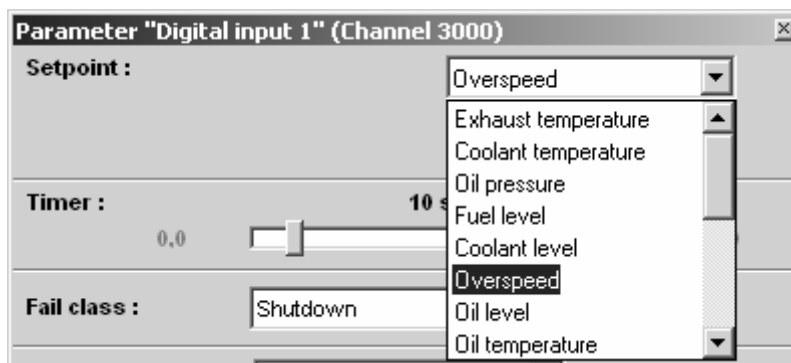


Then name the input from the roll down list.

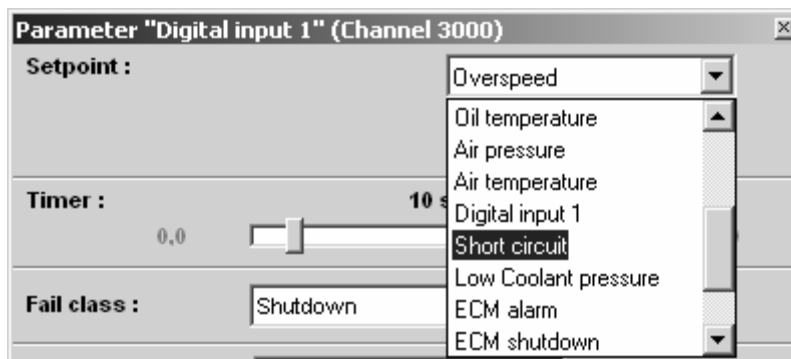

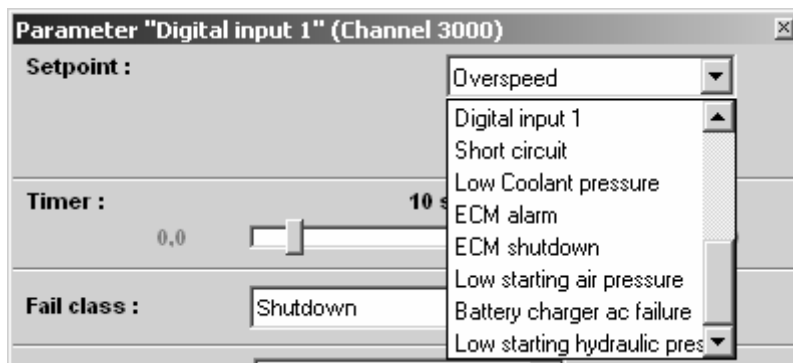

Complete the input settings and select the appropriate fail class and outputs. The outputs A and B can be used to activate one or two of the configurable relay outputs or LEDs. If the relay function is set as a limit relay, no warning pop-up will be shown in the display. The relay 0 is a virtual relay, so both output A and B must be set to limit relays if no warning in the display is wanted.

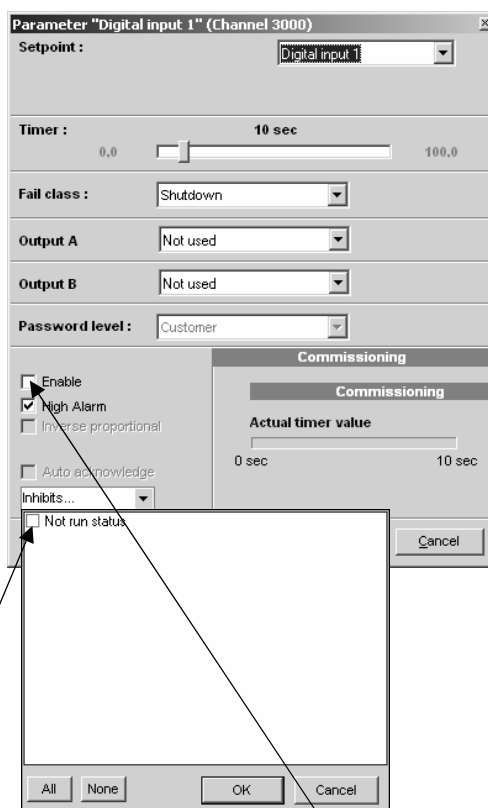


Remember to activate the function by marking the Enable tick box.

If the alarm is only to be active when the gen-set is running, the inhibit settings must be used. If the Not run status is ticked in the inhibit settings, it means that the alarm is inhibited when the Run status timer has not yet expired.


If the High Alarm is set, then the alarm will be registered upon a closing contact. If the High Alarm is not set, then the alarm will be registered upon an opening contact.

After configuration of the input parameter it is possible to assign a relay. Use the dialog box below for configuration of the output relay.

Remember to write the settings to the GC-1F before closing the dialog box.

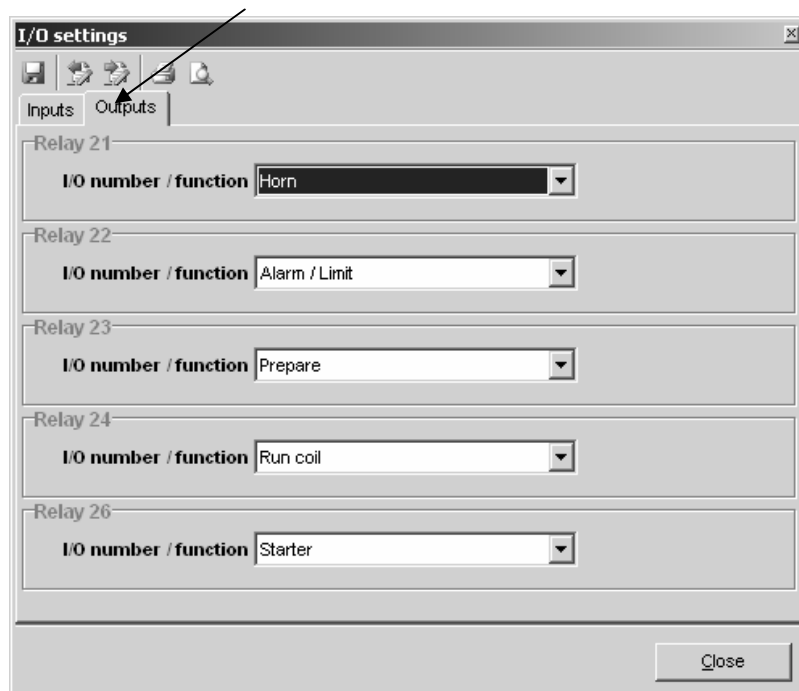

Select the language in the language dialog box.

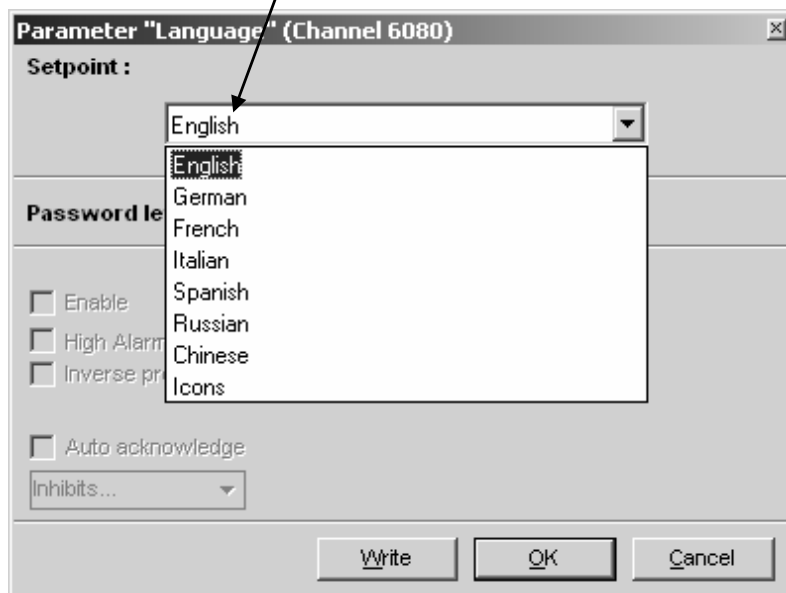

Fail class

All the activated alarms of the GC-1F must be configured with a fail class. The fail classes define the category of the alarms and the subsequent action of the alarm.


Four different fail classes are available:

Fail class	Action						
	Alarm horn relay*	Alarm display	Block engine start	Open gen. breaker	Stop generator	Cooldown	Shutdown
0 Warning	X	X					
1 Trip of GB	X	X		X			
2 Trip and stop	X	X	x	X	X	X	
3 Shutdown	X	X	x	X	X		X

* When alarm horn relay output is selected active.

Fail class configuration

The fail class can be selected for each alarm function via the USW (PC software). To change the fail class via the PC software, the alarm function to be configured must be selected. Select the desired fail class in the fail class roll down panel.

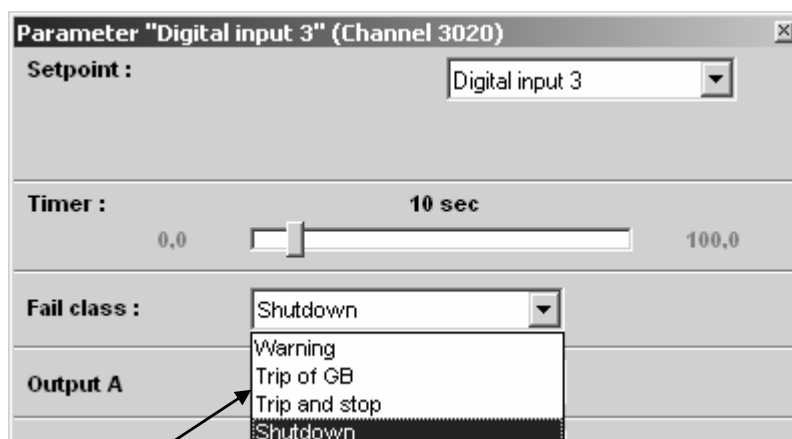

The fail class roll down panel is activated, and the individual functions are ready for selection.

Service timers

The controller can monitor two different maintenance intervals:

-  Service timer 1
-  Service timer 2

The service timers both have the possibility of a setting for days (total elapsed time) and hours (running hours). The day setting counts whenever there is aux. supply on the GC-1F, and the hours count when a running feedback is present. It is possible to set the service timers to count up or count down.

The service timer alarm activates whenever the amount of days or the amount of running hours has expired. If the service timer is set to count down the display will shown 0 days or 0 hours; if the service timer is set to count up the display will show the amount of days or hours programmed in the parameter.

When the service timer alarm appears it can be acknowledged but the alarm will not become

inactive before the service timer has been reset. This can be done from the display or via the utility software. Whenever the service timer is reset, the timer will start counting from the initial value.



The service timer alarm must be reset in the parameter list of the GC-1F or via the utility software in parameter 6116 or 6126 to remove the actual alarm.

VDO sensors



In the following description of the VDO inputs the order will be input 2, 3, 1. In this way we are using the same order as in the PC utility software.

There are three VDO inputs in the unit. The inputs have different functions due to the fact that the hardware design is able to cover several VDO types.



All VDO inputs have a general accuracy of 2%.

VDO input 2: Oil pressure - max. 240 Ohm

VDO input 3: Cooling water temperature - max. 2500 Ohm

VDO input 1: Fuel level sensor - max. 180 Ohm

VDO input 2, oil pressure

		VDO sensor type			
Pressure		Type 1	Type 2	Type 3	Type 4
Bar	Psi	Ω	Ω	Ω	Ω
0	0	10.0	10.0		Configurable
0.5	7	27.2			
1.0	15	44.9		195.6	
1.5	22	62.9			
2.0	29	81.0	51.5	162.2	
2.5	36	99.2			
3.0	44	117.1	71.0	135.7	
3.5	51	134.7			
4.0	58	151.9	89.6	116.6	
4.5	65	168.3			
5.0	73	184.0	107.3	98.0	
6.0	87		124.3	78.9	
7.0	102			68.8	
8.0	116		155.7	57.2	
9.0	131			47.7	
10.0	145		184.0	40.0	



Type 4 is fully configurable with 8 points in the range 0-240Ω and 0-10.0 bar. The parameter settings can be found from menu 10810.

The PC utility software setting looks like this:



8 settings are available from 0-10 bar.


VDO input 3, cooling water temperature

		VDO sensor type				
Temperature		Type 1	Type 2	Type 3	Type 4	Type 5
°C	°F	Ω	Ω	Ω	Ω	Ω
40	104	291.5	480.7	69.3	952	Configurable
50	122				622	
60	140	134.0	222.5	36.0	426	
70	158	97.1		27.9	290	
80	176	70.1	113.2	19.8	197	
90	184	51.2	83.2	15.8	147	
100	212	38.5	62.4	11.7	106	
110	230	29.1	47.6	9.5	90	
120	248	22.4		7.4	76	
130	266		28.9		65	
140	284				55	
150	302		18.2		46	



Type 4 is fully configurable with 8 points in the range 0-2500Ω and 40-150°C or 104-302°F.

The PC utility software setting looks like this:

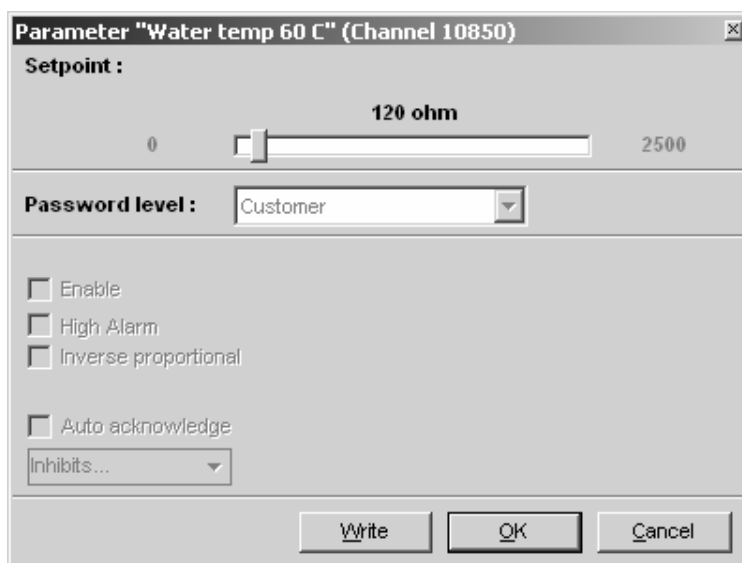

The screenshot shows a window titled "Parameter "Water temp 60 C" (Channel 10850)". It contains a "Setpoint :" section with a slider bar ranging from 0 to 2500, currently set at 120 ohm. Below this is a "Password level :" dropdown menu set to "Customer". There are four checkboxes: "Enable", "High Alarm", "Inverse proportional", and "Auto acknowledge", all of which are unchecked. Below the checkboxes is an "Inhibits..." dropdown menu. At the bottom right are three buttons: "Write", "OK", and "Cancel".



8 settings are available from 0-150° or 104-302°F.

VDO input 1, fuel level

	VDO sensor type
	Type 1
Value	Resistance
0%	78.8Ω
100%	1.6Ω

	VDO sensor type
	Type 2
Value	Resistance
0%	3Ω
100%	180Ω

	VDO sensor type
	Type 3
Value	Resistance
%	Resistance
0	Configurable
10	
20	
30	
40	
50	
60	
70	
80	
90	
100	



Type 3 is fully configurable with 8 points in the input range 0-180Ω and 0-100%.

The PC utility software setting looks like this:

Parameter "Fuel level 40%" (Channel 10490)

Setpoint :

0 40 ohm 180

Password level : Customer

☐ Enable

☐ High Alarm

☐ Inverse proportional

☐ Auto acknowledge

Inhibits...

Write OK Cancel



8 settings are available from 0-150%.

VDO usage

The VDO inputs are used as alarm inputs and can be configured in the following menus.

VDO input 2: Lubricating oil pressure - alarm settings in menus:

4310 VDO oil press. input 2.1

4320 VDO oil press. input 2.2

VDO input 3: Cooling water temperature - alarm settings in menus:

4460 VDO water temp. input 3.1

4470 VDO water temp. input 3.2

VDO input 1: Fuel level - alarm settings in menus:

4220 VDO fuel level input 1.1


4230 VDO fuel level input 1.2

4620 VDO fuel level input 1.3

In addition, VDO input 1 is also used for the fuel logic function.

Illustration of configurable inputs

Value (bar/psi or C/F or %)

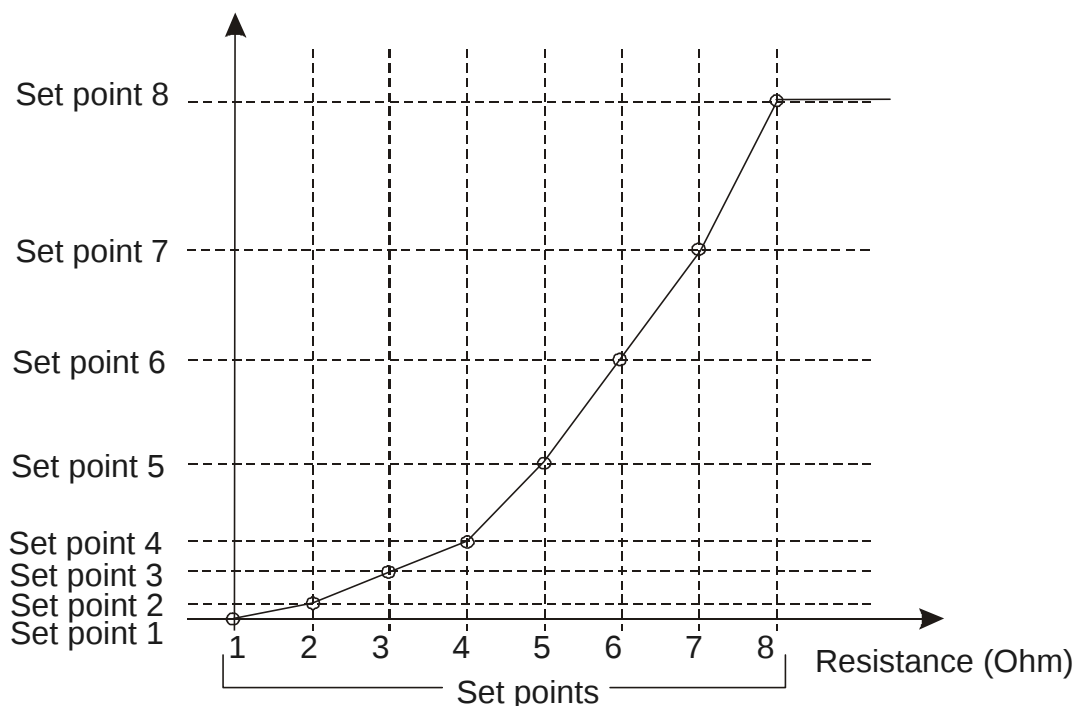

All Y and X axis values can be adjusted in the entire range.

Configuration

The 8 curve settings for the configurable VDO inputs cannot be changed in the display, but **only** in the PC utility software.

Binary inputs with cable supervision

The binary inputs are based on the VDO inputs, i.e. if a VDO input is selected, the binary input cannot be chosen, and vice versa. When selected as multi-functional inputs, the 3 VDO inputs can be changed to binary inputs with cable supervision. The cable supervision is selectable (ON/OFF) and based on the VDO inputs using a 100 Ohm resistor across the monitored switch. The resulting function is:

$R < 20 \text{ Ohm} =$	Switch closed
$30 < R < 140 \text{ Ohm} =$	Switch open, cable OK
$150 \text{ Ohm} < R =$	Wire break

The setting of the alarm input is carried out in the same way as the setting of the standard binary input. So the texts are not 100% configurable but have to be chosen from a preconfigured text list.

Fuel pump logic

The fuel pump logic is used in order to start and stop the fuel supply pump to maintain the fuel level in the service tank at predefined levels. The start and stop limits are detected from the VDO 1 input.


Start level, factory setting at 20% (S2 - 6550 Fuel pump logic)

Stop level, factory setting at 80% (S3 - 6550 Fuel pump logic)



The fuel pump relay is an NO relay and is configured to relay 2 by default. This configuration cannot be changed. If other alarm functions have been configured to relay 2, and the fuel logic is activated, then a *relay channel error* alarm will occur. Please make sure that relay 2 is configured to Fuel Pump.


- Start level, relay 2 activates
- Stop level, relay 2 deactivates

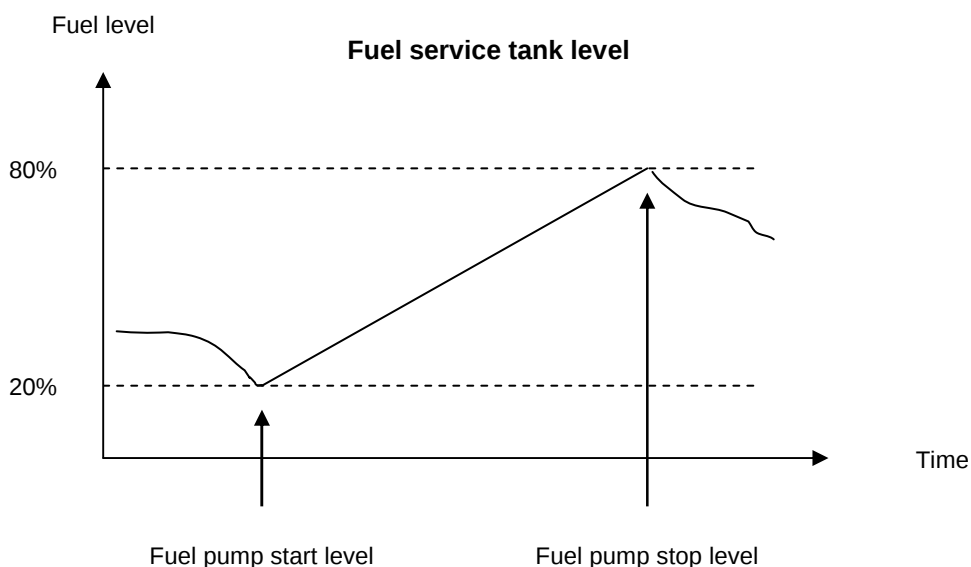

Fuel fill check

The fuel pump logic includes a *fuel fill check* function.

When the fuel pump is running, the fuel level must increase with 4% within the *fuel fill check* timer. This timer is adjusted in 6550 Fuel pump logic, but the level of increase cannot be changed. If the fuel level does not increase at least 4% within the adjusted delay time, then the fuel pump relay will deactivate, and a *fuel fill alarm* occurs.

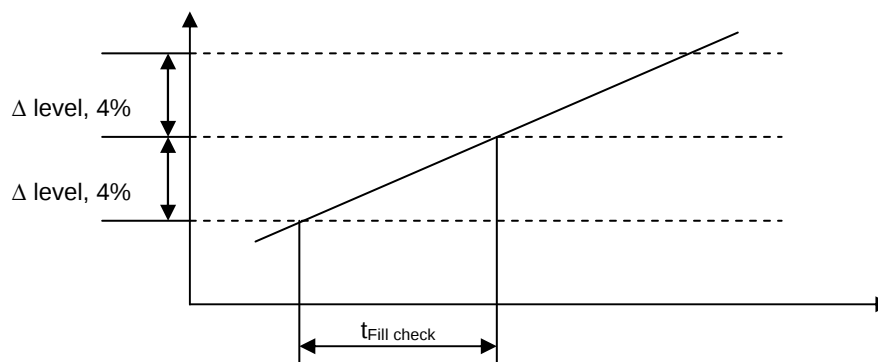

Emergency stop will also deactivate the fuel pump.

4-20mA inputs

The 4-20mA setting can *only* be set in the PC utility software.

Settings:

Scale top point value (click on the '...').

Name: Freely configurable (click on the '...').

Scale low point value.

Tick boxes: Select the needed function.


Unit: E.g. bar, mbar, C, F, %.

RPM inputs

Charger alternator connections

This schematic diagram shows the basic way the charger alternator and the GC-1F can cooperate.

Only one running feedback is needed, but for optimal safety and function both the RPM (Tacho) input and the digital running feedback (D+) can be used as in the example below.

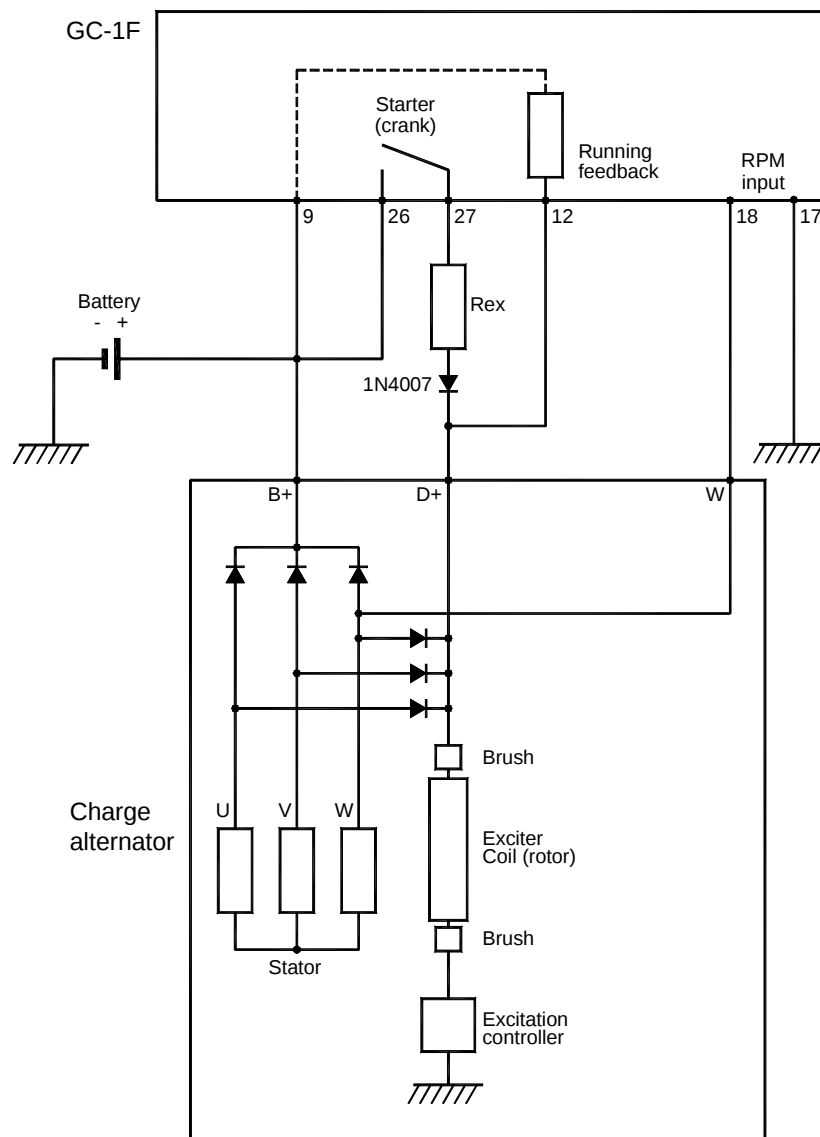

Rex: Excitation resistor: 12V systems: 47Ω 3 W
24V systems: 100Ω 6 W

Charger alternator terminal W


The terminal W output is an AC voltage.

Magnetic pick-up

The 2-wire magnetic pick-up can be connected directly to terminals 17-18.

NPN transistor output pick-up


Since the NPN output is a frequency modulated DC pulse signal, a few external components are needed in order to eliminate the DC component.

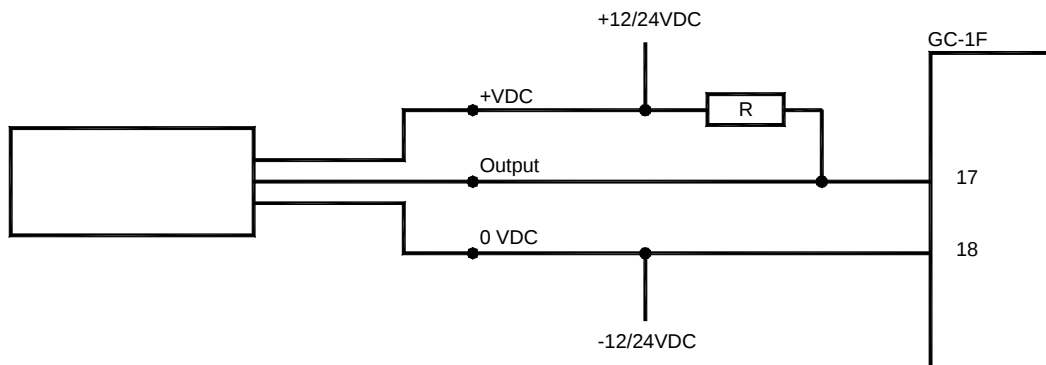

$R = 1200\Omega$ (24V DC), 600Ω (12V DC)

PNP transistor output pick-up

Since the PNP output is a frequency modulated DC pulse signal, a few external components are needed in order to eliminate the DC component.

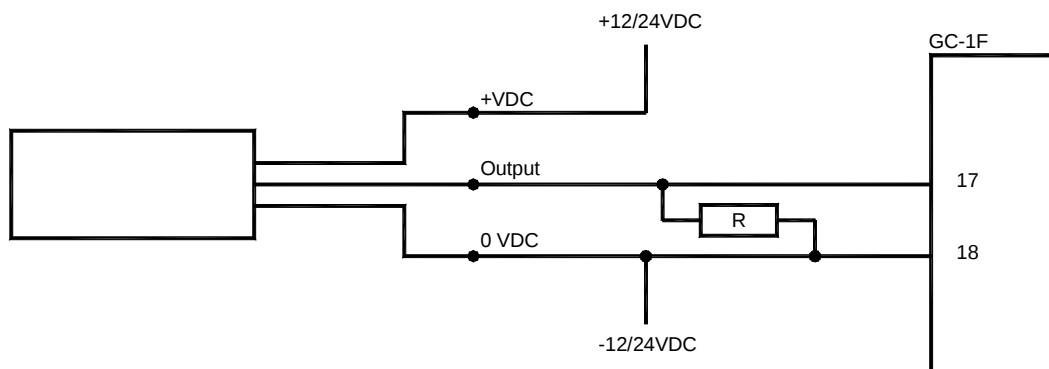

$R = 1200\Omega$ (24V DC), 600Ω (12V DC)

Generator breaker control

Breaker closing

Since the generator is assumed to run alone (single generator island), the breaker will close immediately when the Hz/V OK status is reached (AUTO), or if the breaker close button is activated (LOCAL). In LOCAL mode the breaker can be closed by pressing the GB close button on the front of the GC-1F, when Hz/V is OK.

Relay output control

The generator breaker is assumed to be a contactor, i.e. the relay output is steady ON when the breaker is closed, and steady OFF when the breaker is open. It is not possible to have 2 pulse outputs for a motorised breaker (ON and OFF).

Breaker trip control

Any alarm selected to have the fail class *Trip* or *Shutdown* will automatically open the breaker control relay. If the breaker is closed when the idle speed is activated, a breaker out signal will be transmitted.

Breaker ON/OFF feedback

As default there is no feedback for breaker ON or OFF. The breaker position LED is paralleled to the breaker control relay output. It is possible, however, to select a binary input to be breaker ON feedback and/or an OFF feedback. This is done via an extra selection in the input settings of the PC utility software. This extra input is called *GB Pos on* or *GB Pos off*.

This icon activates the inputs settings:



If the input *Breaker ON feedback* is selected, then the input must be connected and activated, if the breaker is ON. The reason is that a *Breaker close failure* alarm will appear, if the breaker control relay is activated without the binary input. Also, if the breaker control relay is OFF and the binary input is ON, then a *Breaker open failure* alarm will appear.

These alarms are fixed with the fail class *Warning*.

Engine temperature controlled GB closing

This function can be used, if it is recommendable that the engine cooling water temperature must be above a certain temperature before the engine is loaded. In the parameter 6360 it is possible to set the cooling water temperature that must be exceeded, before the generator breaker is closed.

The function is also enabled/disabled in parameter 6360. An engine heating message is displayed, until the engine cooling water temperature has reached the set point in parameter 6360.

The engine cooling water temperature sensor must be selected to be a VDO sensor to make the function work. If the option B3 (AMF logic) is enabled, this function will also work upon a mains failure.


Cooldown controlled by engine temperature

The engine temperature-controlled cooldown is to ensure that the engine is cooled down below the set point in parameter 6213 "Cooldown temperature" before the engine is stopped. This is particularly beneficial if the engine has been running for a short period of time, and therefore has not achieved normal cooling water temperature, as the cooldown period will be very short or none at all. If the engine has been running for a long period it will have reached normal running temperature, the cooldown period will be the exact time it takes to lower the temperature to be

less than the temperature in set point 6213.

If, for some reason, the engine cannot lower the temperature below the temperature set point in 6230 within the time limit in parameter 6560, the engine will be shut down due to this timer. The reason for this could be high ambient temperature.

The temperature-controlled cooldown function is selected in parameter 6214.

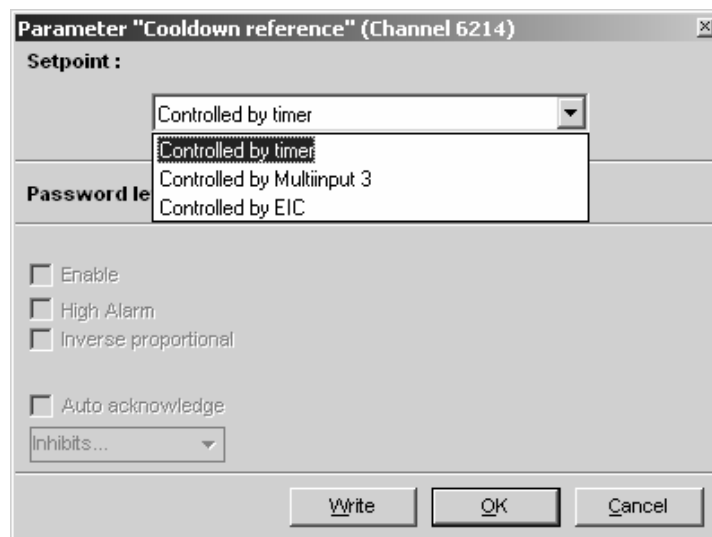

Test function

The GC-1F has two test sequences if the option B3 is enabled. The test sequences can be initiated in two ways: Either with the test push-button on the front of the GC-1F or by a digital input configured to this function.

Simple test function

When the simple test is initiated, the GC-1F will go through the start sequence and run the engine for the time set in parameter 7090. In this parameter it is also selected if this sequence should be started by a digital input and/or the test push-button on the front of the GC-1F. If the timer is set to 0, the test sequence will be interrupted when the digital input or test push-button is deactivated. This means that digital input can be used to activate and deactivate the test sequence. When the timer runs out or the input is deactivated (timer set to 0), the stop sequence including cooling down will be carried out.



The GC-1F must be in Aut. mode in order to initiate the test sequence.

AMF test function (B3 dependent)

When the AMF test is initiated, the GC-1F will go through the AMF sequence and run the engine for the time set in parameter 7040. In this parameter it is also selected if this sequence should be started by a digital input and/or the test push-button on the front of the GC-1F. If the timer is set to 0, the test sequence will be interrupted when the digital input or test push-button is deactivated. This means that digital input can be used to activate and deactivate the test sequence. When the timer runs out or the input is deactivated (timer set to 0), the mains restore sequence and the stop sequence including cooling down will be carried out.

M-logic

M-logic functionality is included in the unit and is not an option dependent function.

M-logic is used to execute different commands at predefined conditions. M-logic is not a PLC but substitutes one, if only very simple commands are needed.

M-logic is a simple tool based on logic events. One or more input conditions are defined, and at the activation of those inputs the defined output will occur. A great variety of inputs can be selected, such as digital inputs, alarm conditions and running conditions. A variety of the outputs can also be selected, such as relay outputs, change of gen-set modes, alarm LEDs and change of running modes.



The M-logic is part of the PC utility software, and as such it can only be configured in the PC utility software and not via the display.

The main purpose of M-logic is to give the operator/designer more flexible possibilities of operating the generator control system.



Please refer to the 'Help' function in the PC utility software for a full description of this configuration tool.

Buzzer

The GC-1F has a built-in buzzer. The buzzer is configured in M-logic. This means that if the buzzer is going to be used as a horn annunciator, the input must be set to 'Horn' and the output must be set to 'Buzzer'. The buzzer will act concurrently to the horn output timer. If the delay timer in M-logic is used, the buzzer will be active after this time delay. See example below.

The screenshot displays the M-logic configuration window with two rules, Logic 1 and Logic 2. Each rule has a header with 'Event A', 'Operator', 'Event B', and 'Operator'. Below the header, there are checkboxes for 'NOT' and dropdown menus for the events and operators. A curved arrow indicates the flow from the logic rule to the output. The output is a dropdown menu, and a delay timer in seconds is also present.

Logic	Event A	Operator	Event B	Operator	Output	Delay (sec.)
Logic 1	NOT ☐ Alarm horn: Alarms	OR	NOT ☐ Not used	OR	Activate buzzer on main u	0
Logic 2	NOT ☒ Alarm horn: Alarms	OR	NOT ☐ Not used	OR	Deactivate buzzer on main u	0




If an AOP-2 is connected, the buzzer in the AOP-2 must be configured under the AOP-2 setup. But the configuration of the AOP-2 buzzer is similar to the above.

GSM communication

GSM communication can be used for 2 purposes:

1. Sending SMS alarm messages to up to 5 different mobile phones. The messages will be sent in clear text, representing the alarm in question (e.g. "Overspeed").
2. Communicate with the GC-1F PC utility software.

Connection:

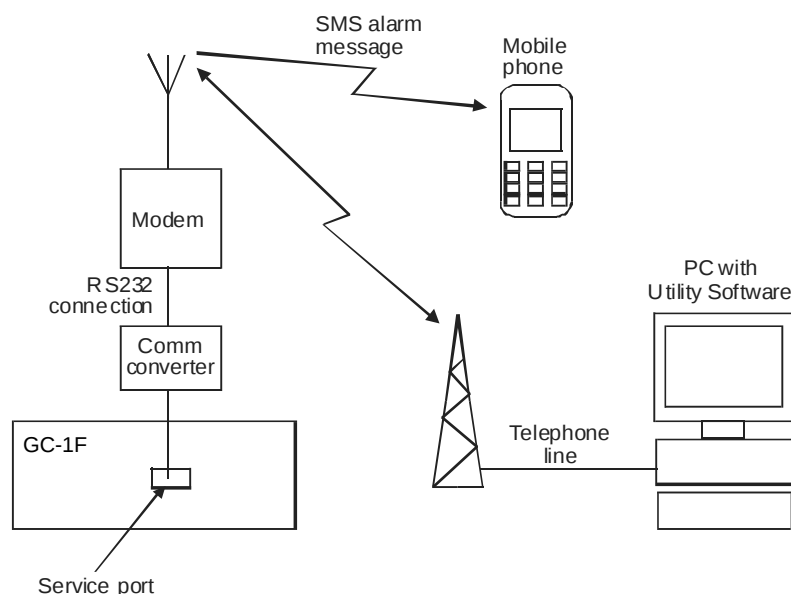

The connection is based on an RS232 connection to a GSM modem via the service port on the GC-1F. Since the connection on the GC-1F is a TTL communication, the interface box PI-1 (option J5) is needed to convert the signals to RS232. The PI-1 connects via a cable with SUB-D 9-pin female connector on the modem side.

We recommend using Westermo GDW-11 modem. The easiest way to get the modem is to purchase it through a local dealer. The SIM card needed comes from your local mobile net provider. The easiest way to set the PIN code in the modem itself is to mount the SIM card in a mobile phone and change the PIN code there. The SIM card will remember the PIN code when it is installed in the modem.

Should an alarm occur during the interruption, the multi-line unit will re-transmit it when the modem starts again, so no messages are lost.

The setting of communication protocol ASCII or RTU can be set in the display or via the utility software parameter number 9020. If included in the GC-1F, option H2 can also be used for modem communication.



The GC-1F must be set up to use ASCII as protocol if a modem is connected to the service port.

Utility software connection via modem



If a PC utility software connection is required, then the SIM card must support data transfer. Contact your GSM provider for details.

PC utility software

Press the application settings push-button.



The settings dialog box appears:




Select modem and key in the telephone number of your GSM modem connected to the unit.




In the above example the modem is selected automatically by the PC utility software (internal modem in the PC).

When you want to use modem dial-up, the PC utility software must also be set to run ASCII 7 bits data communication:

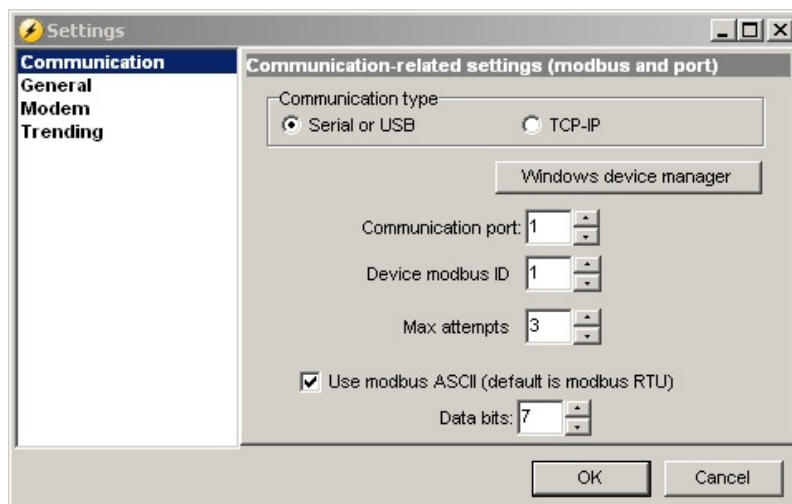

After this, dial-up can be used: Click on the telephone button:

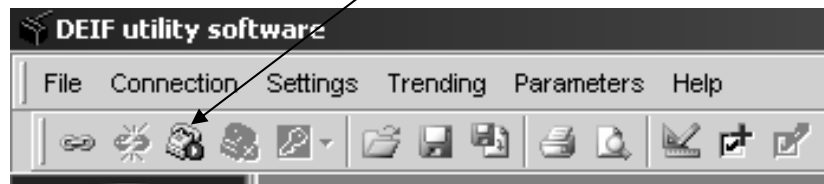


The modem communication is very much slower than the normal direct connection, so please be patient. It is not recommended to download the entire setting list. Use single setting downloads.

PC utility software communication safety



If the communication fails, the GC-1F unit will operate according to the received data. If e.g. only half of the parameter file has been downloaded when the communication is interrupted, the settings are going to be a mix.



Auto engine start


The mains fail
is an option

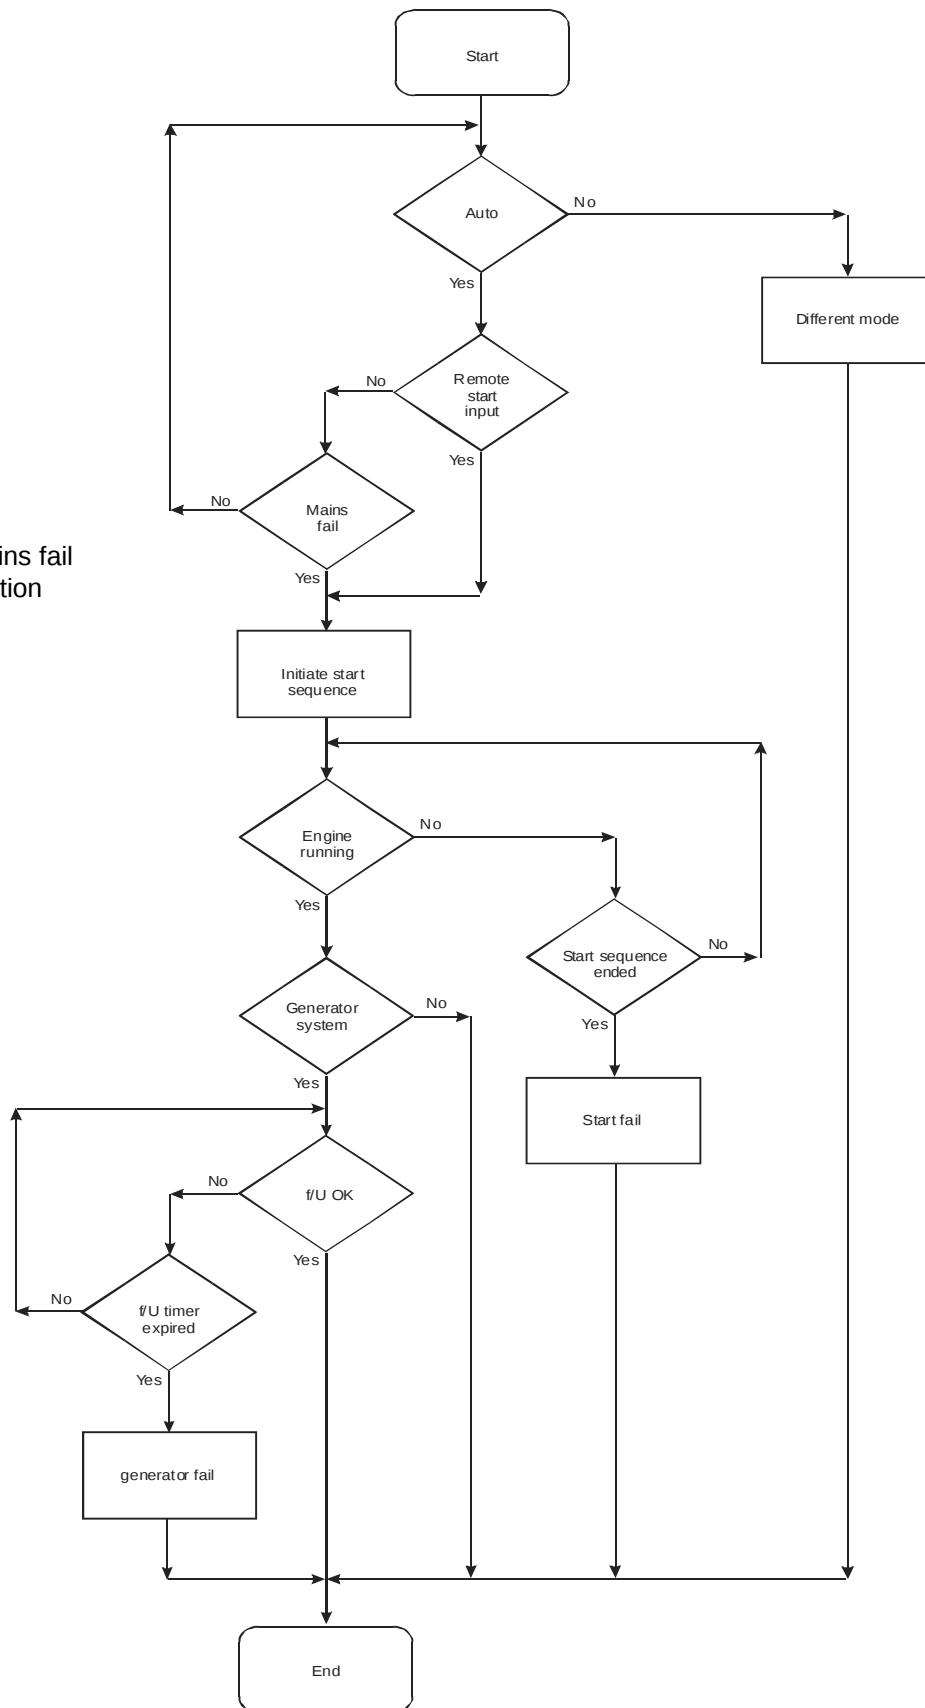

Start sequences

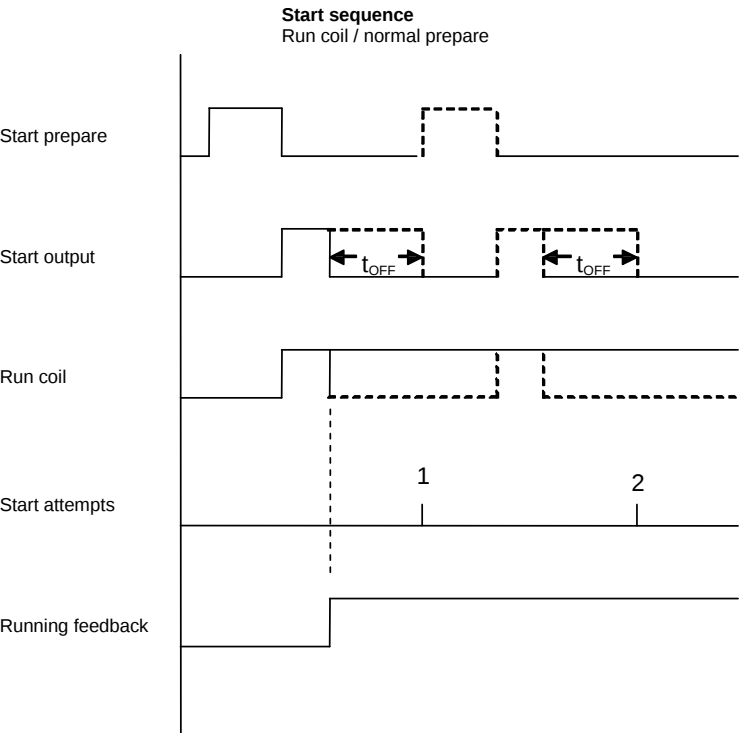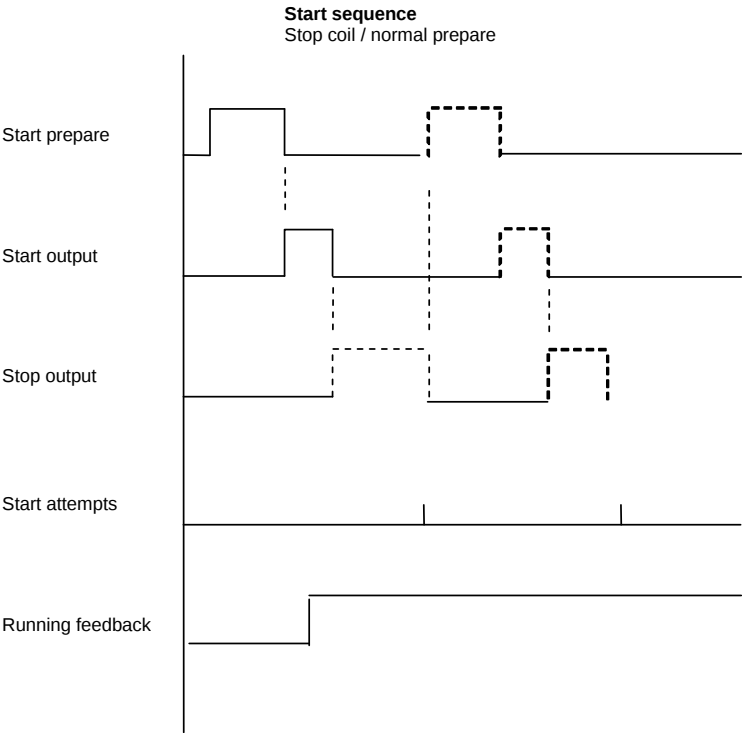

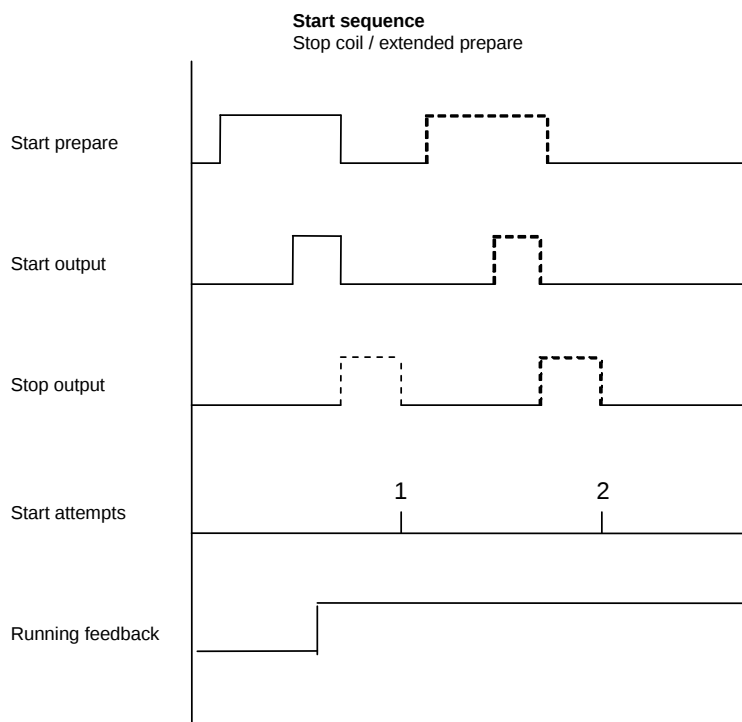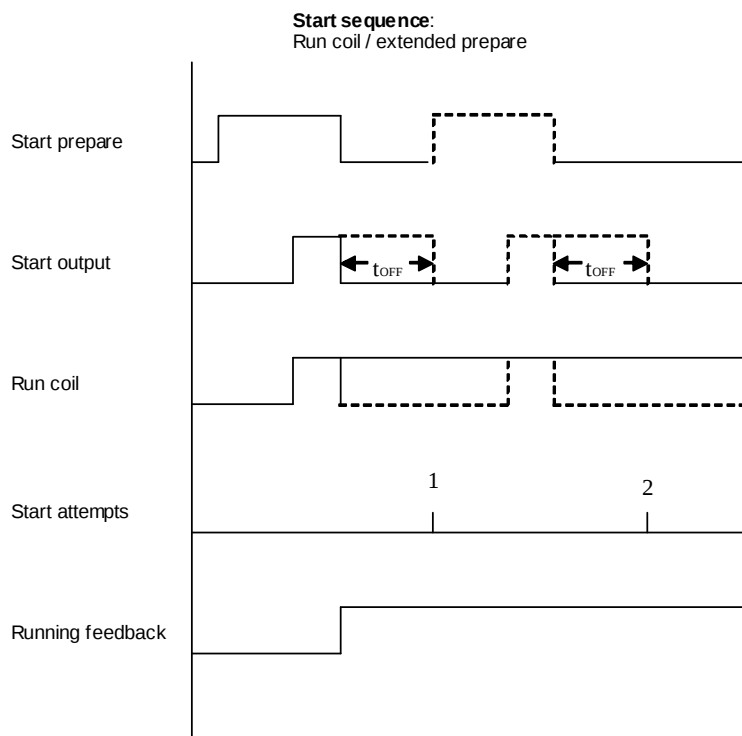

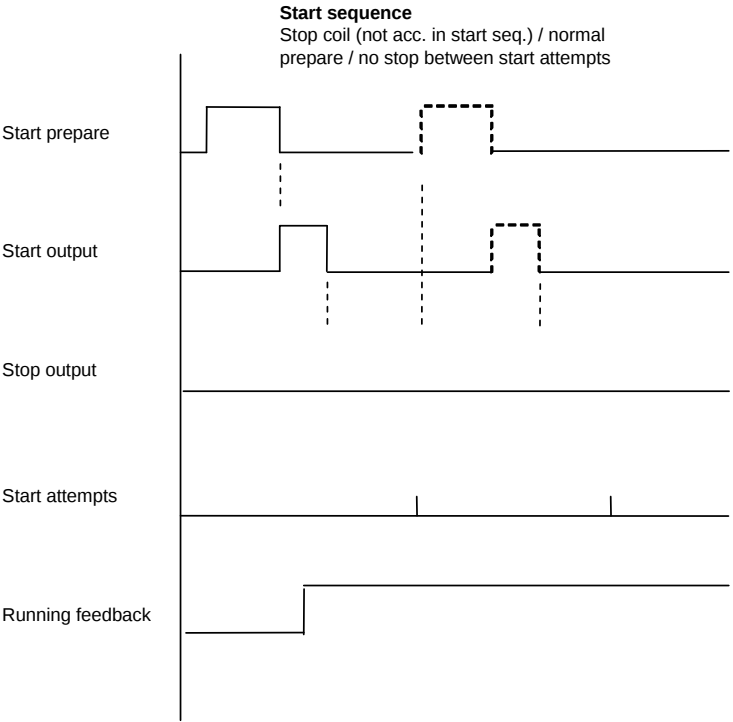

Interruption of start sequence

The start sequence is interrupted in the following situations:

Event	Comment
Auto mode stop	Removal of start cause (binary input) or shutdown.
Start failure	
Running feedback	Tacho set point, menu 6173.
Running feedback	Binary input, D+.
Running feedback	Frequency measurement above 30Hz. The frequency measurement requires a voltage measurement of 30% U_{NOM} . So the running feedback based on the frequency measurement can only be used where the voltage builds up rapidly.
Running feedback	Oil pressure RUN detect menu 6550.
Emergency stop	
Stop push-button on the display	In manual as well as in auto operation.

Start failure alarm

The start failure alarm will occur, if the engine has not started after the last start attempt (i.e. the last crank period). A start failure will activate the HORN output and relay outputs if selected.

Start prepare

There are two possibilities for use of the start prepare timer:

Normal start prepare	The start prepare relay is activated when the start sequence is initiated for the adjusted time and before each start attempt. It deactivates before cranking.
Extended start prepare	The start prepare relay is activated when the start sequence is initiated, and it stays activated when cranking.

6290 Idle mode

Idle mode can be selected in 2 ways:


1. Configurable binary input
2. Timer setting

If a binary input for idle mode is used, activating this will hold the engine in idle mode for as long as the input is activated. This works for both manual and auto mode. Any time the idle mode is activated, the generator breaker will be opened.

If a binary input is not used, a timer function can be set to hold the engine in idle upon start until the timer runs out. This function can be selected to be:

- Off (no idling of engine upon start)
- Active for:
 - both manual and auto: Select Man./Aut.
 - manual only: Select Man.
 - auto only: Select Aut.

In both cases a relay must be selected to Idle in the output list. When idle mode is selected, a delay where the engine is running at low RPM is given. The delay is controlled by the GC-1F, and a relay output will activate the idle control on the engine.

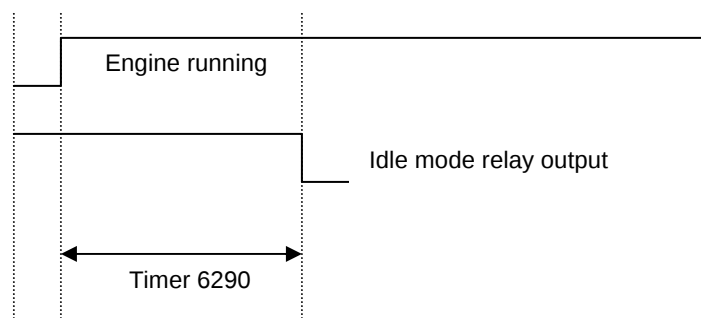

Engine heater

The external heater function can be used to turn on an external heat source, when the engine cooling water temperature gets below the limit in parameter 6320. When the engine cooling water temperature reaches the temperature set point in parameter 6330, the heater is turned off again.


A relay must be selected in the output list to turn this external heat source on/off. The relay will close to turn the heater on or open to turn it off.

This function will only work, if the engine cooling water temperature sensor is selected to be a VDO sensor.


Stop sequences

The illustrations indicate the stop sequence schematically.

Stop sequence / RUN coil

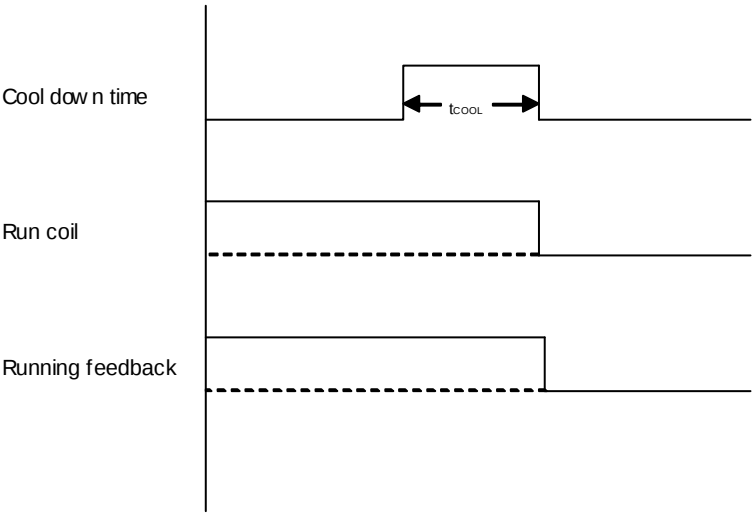

Stop sequence / Stop coil and
Stop coil (not acc. in start seq.)

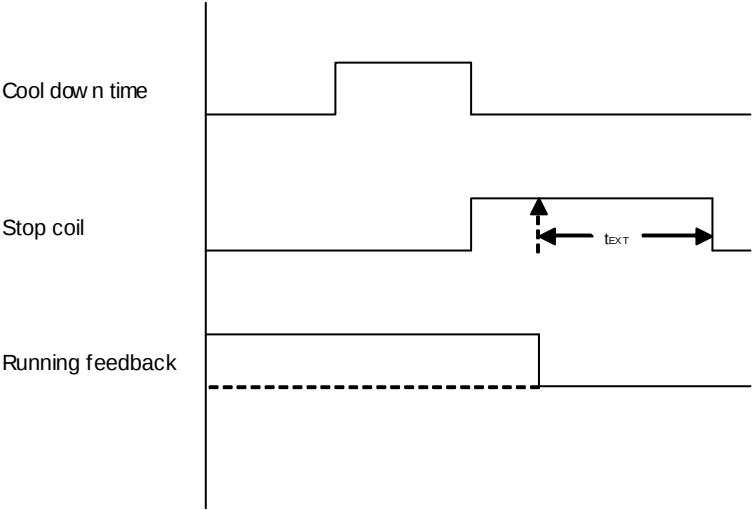

Stop sequence

The stop sequence will be activated, if a stop command is given. The stop sequence can include the cooling down time, if the stop is a normal or controlled stop.

Description	Cooling down	Stop	Comment
Auto mode stop	X	X	
Trip and stop	X	X	
Stop button on display		X	
Binary shutdown input		X	
Emergency stop		X	Engine shutdown and GB opens.

The stop sequence can only be interrupted during the cool down period. Interruptions can occur in these situations:

Event	Comment
Start button is pressed	Manual mode only. Engine will run in idle speed if idle is ON.
Binary start input	Auto mode.
GB close button is pressed	Manual mode only.

Stop failure alarm

A stop failure alarm will occur, if the running feedback (or the generator voltage and frequency) is still present. The stop failure timer is adjusted in menu 4580. Stop failure will activate the HORN output, and relay outputs if selected. Factory setting is no relay outputs besides horn.

7. Parameter list

This chapter includes a complete standard parameter list for setup. Therefore, this chapter is to be used for reference, when information about specific parameters is needed.

Parameter groups

In the parameter overview, the parameters are divided into three parameter groups. The parameter groups can be enabled and disabled in the parameters 6950-6970. If a parameter group is enabled, the parameters will be accessible from the display of the GC-1F. To see the specific parameter, see in the parameter list. If a parameter is marked (P2), it is available from the display, if parameter group 2 is enabled. The default display parameter setting is the parameter setting that will always be present in the display parameter list. These parameters are marked with a *.

Setup

The setup of parameters is performed via the display or the PC utility software (USW). Therefore, the default settings can be changed to the relevant settings through the utility software or by means of the push-buttons on the display.

The settings can be entered through the setup menu. If no entry has taken place before, then the first display to appear is the password display. Enter the factory setting password to gain access to the menus.



The factory Customer password is 2000. The factory Service password is 2001.

If no action has been taken after 30 seconds, then the password entry will be deactivated, and a new password entry is needed. (If entry via the USW is used, the password is only needed once per connection).

Each parameter description is structured according to the same principles. Under the parameter title heading, the detailed parameter descriptions are illustrated and presented. First, a table indicating the parameter facts related to the individual parameter title is presented:

Channel number indicated in USW

Parameter title

Changeable settings

Min. - max. set points

Default set point from factory

4310 VDO input – oil pressure 2.x

No.	Setting		Min. setting	Max. setting	Factory setting
4311	Oil pressure 2.1	Set point	0.0 bar	10.0 bar	4.0 bar
4312	Oil pressure 2.1	Delay	0.0 s	100.0 s	5.0 s
4313	Oil pressure 2.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4314	Oil pressure 2.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4315	Oil pressure 2.1	Enable	OFF	ON	OFF
4316	Oil pressure 2.1	Fail class	Warning	Shutdown	Trip of GB

The first column indicates the channel number in the USW.

The second column indicates the changeable setting in the PC utility software.

The third and fourth columns indicate the minimum/maximum set point available for this setting.

The fifth column indicates the default set point of the unit from the factory.

When it is necessary, additional information will be supplied after the table in order to make the individual parameter descriptions as informative as possible.

Parameter overview

Parameter group 1

6180 Starter	3490 Emergency stop (terminal 19-20)
6210 Run/stop (cooling down)	4120 4-20mA 1.1

Parameter group 2

1030 Overcurrent 1	4130 4-20mA 1.2
1040 Overcurrent 2	4250 4-20mA 2.1
1150 Overvoltage	4260 4-20mA 2.2
1170 Undervoltage	4310 VDO oil press. input 2.1
1210 Overfrequency	4320 VDO oil press. input 2.2
1240 Underfrequency	4380 4-20mA 3.1
	4390 4-20mA 3.2
	4460 VDO water temp. input 3.1
	4470 VDO water temp. input 3.2

Parameter group 3

6550 Fuel pump logic	4510 Overspeed 1 (RPM input)
4220 VDO fuel level input 1.1	4520 Overspeed 2 (RPM input)
4230 VDO fuel level input 1.2	4630 VDO low coolant temp. input 3.3
4600 V-belt/RPM input failure	5000...5060 Relay functions
4610 Charger gen.	6000 Nominal settings 1
4620 VDO fuel level input 1.3	6010 Nominal settings 2
6350 D+ input	6020 Nominal settings 3 (1 ph)
	6030 Nominal settings 4 (split ph)
	6040 Transformer generator

Default display parameter settings

4560 Hz/V failure	6080 Language
4580 Stop failure	6160 Run status
4960 Battery low voltage	6170 Tacho config.
4970 Battery high voltage	6190 Start attempts
6090 Date and time (internal clock)	6290 Idle mode
6100 Counter	6320 Engine heater on
6110 Service timer 1	6330 Engine heater off
6120 Service timer 2	6360 GB on water temp.
6130 Alarm horn	6550 Oil press. run detection
6220 Hz/V OK	6560 Cooldown timeout
9020 Service port	6940 Alarm LED function
	6950 Parameter group 1
	6960 Parameter group 2

Parameters only configurable from USW

1000 Reverse power	6970 Parameter group 3
1630 Ph-0 readings	6980 Sleep mode
2150 Phase sequence error	7090 Simple test function
2160-2170 GB control	9110 Password
3000-3050 Digital input term. 10-15	10320-10370 GSM pin code and dial-up numbers
3400 Binary input 1 (fuel) terminal 6	10470-10610 Fuel level config. sensor
3410 Binary input 2 (oil) terminal 7	10640-10780 Oil pressure config. sensor
3420 Binary input 3 (temp.) terminal 8	10810-10950 Water temp. config sensor
	10980 Configurable input selection

Parameter table description

The table consists of the following possible adjustments:

Set point: The alarm set point is adjusted in the set point menu. The setting can be in percentage of the nominal values.

Timer: The timer setting is the time that must expire from the alarm level is reached until the alarm occurs.

Relay output A: A relay can be activated by output A.

Relay output B: A relay can be activated by output B.

Enable: The alarm can be activated or deactivated. ON means always activated. It is possible to inhibit some of the alarms. This means it is only activated when the running signal is present.

Fail class: When the alarm occurs, the unit will react depending on the selected fail class.



Small differences due to the character of the parameters may exist between the individual tables.

Fail class

The fail class settings for the protections have the following possibilities:

Value	Comment
0: Warning	Shown in alarm pop-up window and activates the chosen relays.
1: Trip	Shown in alarm pop-up window and activates the chosen relays. Trips the breaker.
2: Trip and stop	Shown in alarm pop-up window and activates the chosen relays. Trips the breaker, cools down the engine and stops it.
3: Shutdown	Shown in alarm pop-up window and activates the chosen relays. Trips the breaker and shuts the engine down immediately.

Engine alarm settings (protection)

1000 Reverse power

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1001	Reverse power	Set point	-50.0%	0.0%	-	-5.0%
1002	Reverse power	Timer	0.1 s	100.0 s	-	10.0 s
1003	Reverse power	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1004	Reverse power	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1005	Reverse power	Enable	OFF	ON	Inhibit	ON
1006	Reverse power	Fail class	Warning	Shutdown	-	Trip

1030 Overcurrent 1

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1031	Overcurrent 1 (P2)	Set point	50.0%	200.0%	-	115.0%
1032	Overcurrent 1 (P2)	Timer	0.1 s	100.0 s	-	10.0 s
1033	Overcurrent 1	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1034	Overcurrent 1	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1035	Overcurrent 1	Enable	OFF	ON	Inhibit	ON
1036	Overcurrent 1	Fail class	Warning	Shutdown	-	Trip

1040 Overcurrent 2

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1041	Overcurrent 2 (P2)	Set point	50.0%	200.0%	-	120.0%
1042	Overcurrent 2 (P2)	Timer	0.1 s	100.0 s	-	5.0 s
1043	Overcurrent 2	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1044	Overcurrent 2	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1045	Overcurrent 2	Enable	OFF	ON	Inhibit	ON
1046	Overcurrent 2	Fail class	Warning	Shutdown	-	Trip

1150 Overvoltage

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1151	Overvoltage (P2)	Set point	80.0%	150.0%	-	115.0%
1152	Overvoltage (P2)	Timer	0.1 s	100.0 s	-	10.0 s
1153	Overvoltage	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1154	Overvoltage	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1155	Overvoltage	Enable	OFF	ON	Inhibit	ON
1156	Overvoltage	Fail class	Warning	Shutdown	-	Warning

1170 Undervoltage

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1171	Undervoltage (P2)	Set point	50.0%	110.0%	-	90.0%
1172	Undervoltage (P2)	Timer	0.1 s	100.0 s	-	5.0 s
1173	Undervoltage	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1174	Undervoltage	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1175	Undervoltage	Enable	OFF	ON	Inhibit	ON
1176	Undervoltage	Fail class	Warning	Shutdown	-	Warning

1210 Overfrequency

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1211	Overfrequency (P2)	Set point	80.0%	150.0%	-	115.0%
1212	Overfrequency (P2)	Timer	0.1 s	100.0 s	-	10.0 s
1213	Overfrequency	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1214	Overfrequency	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1215	Overfrequency	Enable	OFF	ON	Inhibit	ON
1216	Overfrequency	Fail class	Warning	Shutdown	-	Warning

1240 Underfrequency

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
1241	Underfrequency (P2)	Set point	50.0%	110.0%	-	90.0%
1242	Underfrequency (P2)	Timer	0.1 s	100.0 s	-	5.0 s
1243	Underfrequency	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
1244	Underfrequency	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
1245	Underfrequency	Enable	OFF	ON	Inhibit	ON
1246	Underfrequency	Fail class	Warning	Shutdown	-	Warning

1630 Ph-0 readings

No.	Setting		Min. setting	Max. setting	Factory setting
1631	Ph-0 readings on/off	Enable	OFF	ON	ON



The setting Ph-0 readings on/off enables/disables the display reading of the phase to neutral readings. This can be used in applications with a three-phased generator without a neutral connection.

2150 Phase sequence error

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
2152	Phase seq error	Timer	0.0 s	10.0 s	-	1.0 s
2153	Phase seq error	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
2154	Phase seq error	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
2155	Phase seq error	Enable	OFF	ON	Inhibit	OFF
2156	Phase seq error	Fail class	Warning	Shutdown	-	Warning

2160 GB close failure

No.	Setting		Min. setting	Max. setting	Factory setting
2161	GB close failure	Timer	0.0 s	10.0 s	1.0 s

2170 GB open failure

No.	Setting		Min. setting	Max. setting	Factory setting
2171	GB open failure	Timer	0.0 s	10.0 s	1.0 s

3000-3050 Digital input term. 10-15, no cable supervision

No.	Setting		Min. setting	Max. setting	Third setting	Factory setting
30X1	Dig. input no. XX	Timer	0.0 s	100.0 s	-	10.0 s
30X2	Dig. input no. XX	Relay output A	R0 (none)	R26 (relay 26)	-	R0 (none)
30X3	Dig. input no. XX	Relay output B	R0 (none)	R26 (relay 26)	-	R0 (none)
30X4	Dig. input no. XX	Enable	OFF	ON	Inhibit	OFF
30X5	Dig. input no. XX	Fail class	See description of fail classes			
30X6	Dig. input no. XX	NO/NC	NO	NC	-	NO

3490 Emergency stop (terminal 19-20)

No.	Setting		Min. setting	Max. setting	Factory setting
3491	Emergency STOP	Timer	0.0 s	60.0 s	0.2 s
3492	Emergency STOP	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
3493	Emergency STOP	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
3494	Emergency STOP	Enable	OFF	ON	ON
3495	Emergency STOP	Fail class	See description of fail classes		

Binary inputs with cable supervision

The text for the inputs for correct display reading can only be done via the utility software.

3400 Binary input 1 (fuel) terminal 6

No.	Setting		Min. setting	Max. setting	Factory setting
3401	Term. 6	Cable supervision	OFF	ON	OFF
3402	Term. 6	Delay	0.0 s	100.0 s	5.0 s
3403	Term. 6	Output A	R0 (none)	R26 (relay 26)	R0 (none)
3404	Term. 6	Output B	R0 (none)	R26 (relay 26)	R0 (none)
3405	Term. 6	Enable	OFF	ON	OFF
3406	Term. 6	Fail class	See description of fail classes		

3410 Binary input 2 (oil) terminal 7

No.	Setting		Min. setting	Max. setting	Factory setting
3411	Term. 7	Cable supervision	OFF	ON	OFF
3412	Term. 7	Delay	0.0 s	100.0 s	5.0 s
3413	Term. 7	Output A	R0 (none)	R26 (relay 26)	R0 (none)
3414	Term. 7	Output B	R0 (none)	R26 (relay 26)	R0 (none)
3415	Term. 7	Enable	OFF	ON	OFF
3416	Term. 7	Fail class	See description of fail classes		

3420 Binary input 3 (temp.) terminal 8

No.	Setting		Min. setting	Max. setting	Factory setting
3421	Term. 8	Cable supervision	OFF	ON	OFF
3422	Term. 8	Delay	0.0 s	100.0 s	5.0 s
3423	Term. 8	Output A	R0 (none)	R26 (relay 26)	R0 (none)
3424	Term. 8	Output B	R0 (none)	R26 (relay 26)	R0 (none)
3425	Term. 8	Enable	OFF	ON	OFF
3426	Term. 8	Fail class	See description of fail classes		

4-20mA inputs

The scaling of the 4-20mA inputs for correct display reading can only be done via the utility software. Also the selection of HIGH/LOW alarm as well as cable supervision can be carried out in the utility software.

4120 4-20mA 1.1

No.	Setting		Min. setting	Max. setting	Factory setting
4121	4-20mA 1.1	Set point	4mA	20mA	10mA
4122	4-20mA 1.1	Delay	0.0 s	100.0 s	5.0 s
4123	4-20mA 1.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4124	4-20mA 1.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4125	4-20mA 1.1	Enable	OFF	ON	OFF
4126	4-20mA 1.1	Fail class	See description of fail classes		

4130 4-20mA 1.2

No.	Setting		Min. setting	Max. setting	Factory setting
4131	4-20mA 1.2	Set point	4mA	20mA	10mA
4132	4-20mA 1.2	Delay	0.0 s	100.0 s	5.0 s
4133	4-20mA 1.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4134	4-20mA 1.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4135	4-20mA 1.2	Enable	OFF	ON	OFF
4136	4-20mA 1.2	Fail class	See description of fail classes		

4250 4-20mA 2.1

No.	Setting		Min. setting	Max. setting	Factory setting
4251	4-20mA 2.1	Set point	4mA	20mA	10mA
4252	4-20mA 2.1	Delay	0.0 s	100.0 s	5.0 s
4253	4-20mA 2.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4254	4-20mA 2.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4255	4-20mA 2.1	Enable	OFF	ON	OFF
4256	4-20mA 2.1	Fail class	See description of fail classes		

4260 4-20mA 2.2

No.	Setting		Min. setting	Max. setting	Factory setting
4261	4-20mA 2.2	Set point	4mA	20mA	10mA
4262	4-20mA 2.2	Delay	0.0 s	100.0 s	5.0 s
4263	4-20mA 2.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4264	4-20mA 2.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4265	4-20mA 2.2	Enable	OFF	ON	OFF
4266	4-20mA 2.2	Fail class	See description of fail classes		

4380 4-20mA 3.1

No.	Setting		Min. setting	Max. setting	Factory setting
4381	4-20mA 3.1	Set point	4mA	20mA	10mA
4382	4-20mA 3.1	Delay	0.0 s	100.0 s	5.0 s
4383	4-20mA 3.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4384	4-20mA 3.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4385	4-20mA 3.1	Enable	OFF	ON	OFF
4386	4-20mA 3.1	Fail class	See description of fail classes		

4390 4-20mA 3.2

No.	Setting		Min. setting	Max. setting	Factory setting
4391	4-20mA 3.2	Set point	4mA	20mA	10mA
4392	4-20mA 3.2	Delay	0.0 s	100.0 s	5.0 s
4393	4-20mA 3.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4394	4-20mA 3.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4395	4-20mA 3.2	Enable	OFF	ON	OFF
4396	4-20mA 3.2	Fail class	See description of fail classes		

VDO inputs

4220 VDO fuel level input 1.1

No.	Setting		Min. setting	Max. setting	Factory setting
4221	Fuel level 1.1 (P3)	Set point	0%	100%	10%
4222	Fuel level 1.1 (P3)	Delay	0.0 s	100.0 s	5.0 s
4223	Fuel level 1.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4224	Fuel level 1.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4225	Fuel level 1.1	Enable	OFF	ON	OFF
4226	Fuel level 1.1	Fail class	See description of fail classes		

4230 VDO fuel level input 1.2

No.	Setting		Min. setting	Max. setting	Factory setting
4231	Fuel level 1.2 (P3)	Set point	0%	100%	99%
4232	Fuel level 1.2 (P3)	Delay	0.0 s	100.0 s	5.0 s
4233	Fuel level 1.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4234	Fuel level 1.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4235	Fuel level 1.2	Enable	OFF	ON	OFF
4236	Fuel level 1.2	Fail class	See description of fail classes		

4310 VDO oil press. input 2.1

No.	Setting (D)		Min. setting	Max. setting	Factory setting
4311	VDO 2.1	Set point	0.0 bar	10.0 bar	4.0 bar
4312	VDO 2.1	Delay	0.0 s	100.0 s	5.0 s
4313	VDO 2.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4314	VDO 2.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4315	VDO 2.1	Enable	OFF	ON	OFF
4316	VDO 2.1	Fail class	See description of fail classes		

4320 VDO oil press. input 2.2

No.	Setting (D)		Min. setting	Max. setting	Factory setting
4321	VDO 2.2	Set point	0.0 bar	10.0 bar	4.0 bar
4322	VDO 2.2	Delay	0.0 s	100.0 s	5.0 s
4323	VDO 2.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4324	VDO 2.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4325	VDO 2.2	Enable	OFF	ON	OFF
4326	VDO 2.2	Fail class	See description of fail classes		

4460 VDO water temp. input 3.1

No.	Setting		Min. setting	Max. setting	Factory setting
4461	VDO 3.1	Set point	0°C	150°C	95°C
4462	VDO 3.1	Delay	0.0 s	100.0 s	5.0 s
4463	VDO 3.1	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4464	VDO 3.1	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4465	VDO 3.1	Enable	OFF	ON	OFF
4466	VDO 3.1	Fail class	See description of fail classes		

4470 VDO water temp. input 3.2

No.	Setting		Min. setting	Max. setting	Factory setting
4471	VDO 3.2	Set point	0°C	150°C	95°C
4472	VDO 3.2	Delay	0.0 s	100.0 s	5.0 s
4473	VDO 3.2	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4474	VDO 3.2	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4475	VDO 3.2	Enable	OFF	ON	OFF
4476	VDO 3.2	Fail class	See description of fail classes		

4630 VDO low coolant temp. input 3.3

No.	Setting		Min. setting	Max. setting	Factory setting
4631	VDO 3.3	Set point	-50°C	50°C	10°C
4632	VDO 3.3	Delay	0.0 s	10.0 s	1.0 s
4633	VDO 3.3	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4634	VDO 3.3	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4635	VDO 3.3	Enable	OFF	ON	OFF
4636	VDO 3.3	Fail class	See description of fail classes		



VDO type: See functional description.

RPM input**4510 Overspeed 1 (RPM input)**

No.	Setting		Min. setting	Max. setting	Factory setting
4511	Overspeed 1	Set point	0%	400%	160%
4512	Overspeed 1	Timer	0.2 s	100.0 s	15.0 s
4513	Overspeed 1	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4514	Overspeed 1	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4515	Overspeed 1	Enable	OFF	ON	OFF
4516	Overspeed 1	Fail class	See description of fail classes		

4520 Overspeed 2 (RPM input)

No.	Setting		Min. setting	Max. setting	Factory setting
4521	Overspeed 2	Set point	0%	400%	160%
4522	Overspeed 2	Timer	0.2 s	100.0 s	15.0 s
4523	Overspeed 2	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4524	Overspeed 2	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4525	Overspeed 2	Enable	OFF	ON	OFF
4526	Overspeed 2	Fail class	See description of fail classes		



Overspeed 1 and 2 are always active if enabled regardless of nominal setting. Thus it is possible to set two levels of overspeed.

4560 Hz/V failure

No.	Setting		Min. setting	Max. setting	Factory setting
4561	Hz/V failure*	Timer	1.0 s	99.0 s	30.0 s
4562	Hz/V failure	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4563	Hz/V failure	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4565	Hz/V failure	Enable	OFF	ON	ON
4566	Hz/V failure	Fail class	See description of fail classes		

When the frequency and voltage have not been OK for the adjusted delay time, a *Hz/V failure* alarm occurs, and output A and B activate.

4580 Stop failure

No.	Setting		Min. setting	Max. setting	Factory setting
4581	Stop failure*	Timer	10.0 s	120.0 s	30.0 s
4582	Stop failure	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4583	Stop failure	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)

If the engine has not stopped within the delay time, outputs A and B will activate and a *stop failure* alarm occurs.

4600 V-belt/RPM input failure

No.	Setting		Min. setting	Max. setting	Factory setting
4601	V-belt (P3)	Timer	0.0 s	10.0 s	1.0 s
4602	V-belt	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4603	V-belt	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4604	V-belt	Enable	OFF	ON	OFF
4605	V-belt	Fail class	See description of fail classes		



The V-belt failure is used on air-cooled engines to monitor that the V-belt driven cooling fan is operating properly. This alarm requires W input to be used in parallel with another running feedback at the same time. The status of both will be compared. If they do not match, a V-belt alarm will be activated.

4610 Charger gen.

No.	Setting		Min. setting	Max. setting	Factory setting
4611	Charger gen. (P3)	Timer	0.0 s	60.0 s	0.2 s
4612	Charger gen.	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4613	Charger gen.	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4614	Charger gen.	Enable	OFF	ON	OFF
4615	Charger gen.	Fail class	See description of fail classes		



This alarm requires D+ input to be used in parallel with another running feedback at the same time (binary input, tacho, generator voltage). The status of both will be compared. If they do not match, a charger gen. alarm will be activated.

4620 VDO fuel level input 1.3

No.	Setting		Min. setting	Max. setting	Factory setting
4621	Fuel level 1.3 (P3)	Set point	0%	100%	80%
4622	Fuel level 1.3 (P3)	Delay	0.0 s	100.0 s	5.0 s
4623	Fuel level 1.3	Output A	R0 (none)	R26 (relay 26)	R0 (none)
4624	Fuel level 1.3	Output B	R0 (none)	R26 (relay 26)	R0 (none)
4625	Fuel level 1.3	Enable	OFF	ON	OFF
4626	Fuel level 1.3	Fail class	See description of fail classes		

4960 Battery low voltage

No.	Setting		Min. setting	Max. setting	Factory setting
4961	Battery low V*	Set point	6.0V	28.0V	16.0V
4962	Battery low V*	Timer	0.0 s	10.0 s	1.0 s
4963	Battery low V	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4964	Battery low V	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4965	Battery low V	Enable	OFF	ON	ON

4970 Battery high voltage

No.	Setting		Min. setting	Max. setting	Factory setting
4971	Battery high V*	Set point	15.0V	40.0V	28.0V
4972	Battery high V*	Timer	0.0 s	10.0 s	1.0 s
4973	Battery high V	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
4974	Battery high V	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
4975	Battery high V	Enable	OFF	ON	OFF

5000...5060 Relay functions

No.	Setting		First/min. setting	Second/max. setting	Factory setting
50X1	Relay X	Function	Alarm	Limit	Alarm
50X2	Relay X	Off delay	0.0 s	999.9 s	5.0 s



If option B3 is present, then parameter 5050 and 5060 are not available.

The relays can be configured in the two different ways described below.

Alarm relay function: When an alarm activates the relay, it is activated as long as the alarm is present and unacknowledged. If the Off delay is set different from 0.0 s, a short reset of the relay will take place when a new alarm appears.

Limit function: When an input activates the relay, no alarm message is displayed. After the condition activating this relay has returned to normal, the relay will deactivate when the Off delay has expired.

6000 Nominal settings 1

No.	Setting		Min. setting	Max. setting	Factory setting
6001	Nominal settings 1	Frequency	48.0Hz	62.0Hz	50.0Hz
6002	Nominal settings 1	Generator power	4kW	20000kW	480kW
6003	Nominal settings 1	Generator current	0A	9000A	787A
6004	Nominal settings 1	Generator volt.	50V	25000V	400V
6005	Nominal settings 1	Nom. RPM 1	0 RPM	4000 RPM	1500 RPM
6006	Nominal settings	Set			



Which set of nominal setting is used can be chosen in parameter 6006.

6010 Nominal settings 2

No.	Setting		Min. setting	Max. setting	Factory setting
6011	Nominal settings 2	Frequency	48.0Hz	62.0Hz	50.0Hz
6012	Nominal settings 2	Generator power	4kW	20000kW	480kW
6013	Nominal settings 2	Generator current	0A	9000A	787A
6014	Nominal settings 2	Generator volt.	50V	25000V	400V
6015	Nominal settings 2	Nom. RPM 2	0 RPM	4000 RPM	1500 RPM



The voltage set in nominal settings 1 and 2 is phase to phase values.

6020 Nominal settings 3 (1 ph)

No.	Setting		Min. setting	Max. setting	Factory setting
6021	Nominal settings 3	Frequency	48.0Hz	62.0Hz	50.0Hz
6022	Nominal settings 3	Generator power	4kW	20000kW	480kW
6023	Nominal settings 3	Generator current	0A	9000A	787A
6024	Nominal settings 3	Generator volt.	50V	25000V	230V
6025	Nominal settings 3	Nom. RPM 3	0 RPM	4000 RPM	1500 RPM

6030 Nominal settings 4 (split ph)

No.	Setting		Min. setting	Max. setting	Factory setting
6031	Nominal settings 4	Frequency	48.0Hz	62.0Hz	50.0Hz
6032	Nominal settings 4	Generator power	4kW	20000kW	480kW
6033	Nominal settings 4	Generator current	0A	9000A	787A
6034	Nominal settings 4	Generator volt.	50V	25000V	400V
6035	Nominal settings 4	Nom. RPM 4	0 RPM	4000 RPM	1500 RPM



Each nominal setting can be selected by parameter 6006, M-logic or by external communication.



The voltage set in nominal settings 4 is phase (L1) to phase (L2) values.

6040 Transformer generator

No.	Setting		Min. setting	Max. setting	Factory setting
6041	Transformer gen.	Primary	50V	25000V	440V
6042	Transformer gen.	Secondary	50V	480V	440V
6043	Transformer gen.	Current prim.	5A	9000A	1000A
6045	Transformer gen.	Current sec.	1A	5A	5A



If no voltage transformer is used, the setting 440/440V can be maintained.

6080 Language

No.	Setting		Setting	Factory setting
6081	Language	English	English	English
		German		
		French		
		Spanish		
		Icon		
		Italian		
		Chinese		
		Cyrillic		

6090 Date and time (internal clock)

No.	Setting		Min. setting	Max. setting	Factory setting
6091	Date and time*	Year	2000	2099	Depending on the software version
6092	Date and time*	Month	1	12	
6093	Date and time*	Day	1	31	
6094	Date and time*	Hour	0	23	
6095	Date and time*	Minute	0	59	
6096	Date and time*	Second	0	59	



All settings in 6090 have the password level service.



The date and time can easily be synchronised with the present date and time from the utility software. So these parameters are only available in the display.

6100 Counter

No.	Setting		Min. setting	Max. setting	Factory setting
6101	Counter*	Running time	0	20000	0
6103	Counter*	No. of GB operations	OFF	ON	OFF
6105	Counter*	Reset counter kWh	OFF	ON	OFF

6110 Service timer 1

No.	Setting		Min. setting	Second setting	Max. setting	Factory setting
6111	Service timer 1	Type	OFF	Counting down	Counting up	Counting up
6112	Service timer 1*	Set point hours	10		10000	150
6113	Service timer 1*	Set point days	1		1000	365
6114	Service timer 1	Fail class	See description of fail classes			
6115	Service timer 1	Output A	Relay 0		Relay 5	Relay 0
6116	Service timer 1*	Reset	OFF		ON	OFF

6120 Service timer 2

No.	Setting		Min. setting	Second setting	Max. setting	Factory setting
6121	Service timer 2	Type	OFF	Counting down	Counting up	Counting down
6122	Service timer 2*	Set point hours	10		10000	150
6123	Service timer 2*	Set point days	1		1000	365
6124	Service timer 2	Fail class	See description of fail classes			
6125	Service timer 2	Output A	Relay 0		Relay 5	Relay 0
6126	Service timer 2*	Reset	OFF		ON	OFF

6130 Alarm horn

No.	Setting		Min. setting	Max. setting	Factory setting
6131	Alarm horn*	Timer	0.0 s	990.0 s	20.0 s

According to factory setting the horn output will activate for 20 seconds when an alarm appears. If the timer setting is adjusted to 0, the horn relay will be activated continuously, until the reset alarm horn push-button is activated or the alarm is acknowledged.

6160 Run status

No.	Setting		Min. setting	Max. setting	Factory setting
6161	Run status	Timer	0.0 s	60.0 s	5.0 s
6162	Run status	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
6163	Run status	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)
6164	Run status	Enable	OFF	ON	OFF

The running status detection has two purposes:

1. When the time delay period expires, all the alarms which have Enable selected to 'Not run status' will be activated.
2. An output relay can be selected, if one is available. In that case, the settings output A and output B must be set according to the desired relay. To avoid an unwanted display alarm, 'RUN STATUS ALARM', the function of this relay must be selected to 'Limit' function to avoid the alarm when the engine starts. Notice that both output A and output B must have the same settings, when the function of the relay is set only as limit switch.

6170 Tacho config.

No.	Setting		Min. setting	Max. setting	Factory setting
6173	Tacho config.	Set point	0 RPM	4000 RPM	400 RPM
6171	Tacho config.	Number of teeth	0 teeth	500 teeth	0 teeth



The tacho config. set point is used to deactivate the start relay. The number of teeth is used to configure the tacho input. The tacho input must be configured to 0 teeth when not in use. The tacho input accepts magnetic pick-up (direct connection) or NPN/PNP/charger generator W input. Refer to functional description for information. Note that the frequency range for the tacho input is 10Hz to 10000Hz.



The * indicates parameters that can be changed via the push-buttons/display.

6180 Starter

No.	Setting		Min. setting	Max. setting	Factory setting
6181	Starter (P1)	Start prepare	0.0 s	600.0 s	5.0 s
6183	Starter (P1)	Start ON time	1.0 s	180.0s	5.0 s
6184	Starter (P1)	Start OFF time	1.0 s	99.0 s	5.0 s



The settings “start prepare”, “start ON time” and “start OFF time” are the periods in which the start relay is activated.



The start prepare output can e.g. be used for prelubricating or preheating. The start relay output is for activating the engine starter. The start sequence can be activated manually by pressing the “START” push-button in Local (hand) mode.



If no output relay has been chosen as starter relay, the start and stop sequences (cooling down) will be ignored, and the GC-1F will only operate as a safety stop device.

6190 Start attempts

No.	Setting		Min. setting	Max. setting	Factory setting
6191	Start attempts	Attempts	1	10	3
6192	Start attempts	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
6193	Start attempts	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)

The outputs A and B are activated at a start failure.

6210 Run/stop (cooling down)

No.	Setting		Min. setting	Max. setting	Factory setting
6211	Run/stop (P1)	Cooling down time	0.0 s	999.0 s	240.0 s
6212	Run/stop (P1)	Extended STOP	1.0 s	99.0 s	5.0 s
6213	Cool. down temp.	Cool down temp.	0°C	302°C	70°C
6214	Reference	Input for temp. ref.	VDO 3	EIC	VDO 3

Hz/V monitoring settings

6220 Hz/V OK

No.	Setting		Min. setting	Max. setting	Factory setting
6221	Hz/V OK*	Timer	1.0 s	99.0 s	5.0 s
6222	Hz/V OK*	Voltage	1%	70%	10%
6223	Hz/V OK*	Frequency	1Hz	20Hz	5Hz



The setting ranges refer to nominal setting (nominal voltage +/- setting %, nominal frequency +/- setting Hz).

6290 Idle mode

No.	Setting		Min. setting	Max. setting	Factory setting
6291	Idle mode	Enable	OFF	ON	OFF
6292	Idle mode	Timer	1.0 s	300.0 s	5.0 s
6293	Idle mode	Active	Man.	Man./aut.	Aut.

Idle mode can be controlled via a binary input. If this is selected, the idle mode remains for as long as the input is ON. If a binary input is not used, the idle mode can be selected to be active for manual or auto or both running modes.

- Both manual and auto: Select Man./Aut.
- Manual only: Select Man.
- Auto only: Select Aut.

6320 Engine heater on

No.	Setting		Min. setting	Max. setting	Factory setting
6321	External heater on	Set point	0 C/F	100 C/F	10 C/F

6330 Engine heater off

No.	Setting		Min. setting	Max. setting	Factory setting
6331	External heater off	Set point	0 C/F	100 C/F	20 C/F



In order to make the external heater function work, a relay must be designated to this function in the output settings.

6350 D+ input

No.	Setting		Min. setting	Max. setting	Factory setting
6351	D+ input (P3)	Timer	0.0 s	100.0 s	10.0 s
6352	D+ input	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
6353	D+ input	Enable	OFF	ON	OFF
6354	D+ input	NO/NC	NO	NC	NO



If the D+ input is selected to be ON, this will be used as a running feedback. The D+ output from the charge generator must be connected to the input terminal configured to this function. The terminal 9 (common for terminals 10-15) must be connected to +, otherwise the D+ input does not work.

6360 GB on water temp.

No.	Setting		Min. setting	Max. setting	Factory setting
6361	GB on water temp.	Set point	0 C/F	100 C/F	40 C/F
6362	GB on water temp.	Enable	OFF	ON	OFF

6550 Fuel pump logic

No.	Setting		Min. setting	Max. setting	Factory setting
6551	Fuel pump logic (P3)	Set point 1	0%	100%	20%
6552	Fuel pump logic (P3)	Set point 2	0%	100%	90%
6553	Fuel pump logic (P3)	Timer	0.1 s	300.0 s	60.0 s
6554	Fuel pump logic	Enable	OFF	ON	OFF



A relay must be configured to fuel pump in output settings.



10980 Conf. inp. 1 must be set to VDO to activate the fuel pump logic.

6560 Cooldown timeout

No.	Setting		Min. setting	Max. setting	Factory setting
6561	Cooldown timeout	Timer	0.0 s	9999.0 s	900.0 s
6562	Cooldown timeout	Relay output A	R0 (none)	R26 (relay 26)	R0 (none)
6563	Cooldown timeout	Relay output B	R0 (none)	R26 (relay 26)	R0 (none)

6570 Oil press. run detection

No.	Setting		Min. setting	Max. setting	Factory setting
6571	Oil press. run detection	Set point	0 bar/PSI	150 bar/PSI	1 bar/PSI
6572	Oil press. run detection	Enable	OFF	ON	OFF



Parameter 6570 Oil pres. run detection makes it possible to use the oil pressure as a running feedback.

6700 Diode compensation

No.	Setting		Min. setting	Max. setting	Factory setting
6700	Diode compensation	Set point	0V	1V	0V



The parameter 6700 can add an offset to the supply voltage measurement displayed. This can be useful, if a diode is mounted in the supply connection.

6950 Parameter group 1

No.	Setting		Min. setting	Max. setting	Factory setting
6950	Parameter group 1	Enable	OFF	ON	OFF

6960 Parameter group 2

No.	Setting		Min. setting	Max. setting	Factory setting
6960	Parameter group 2	Enable	OFF	ON	OFF

6970 Parameter group 3

No.	Setting		Min. setting	Max. setting	Factory setting
6970	Parameter group 3	Enable	OFF	ON	OFF



If a parameter list is enabled, the parameters marked (PX) are available in the display parameter list.

6980 Sleep mode

No.	Setting		Min. setting	Max. setting	Factory setting
6981	Sleep	Timer	0 sec.	1800 sec.	600 sec.
6982	Sleep	ON/OFF	OFF	ON	OFF

The sleep mode is a standstill power save mode. If the engine is stopped and nothing has happened within the time setting, the unit will enter sleep mode, i.e. the most power consuming

functions (e.g. display) are turned off. As soon as an event occurs (a button is activated, the input state changes), the sleep mode is ended.

7090 Simple test function

No.	Setting		Min. setting	Second setting	Max. setting	Factory setting
7091	Activation	Set point	Digital input	Button	Digital input or button	Button
7092	Timer	Timer	0.0 s	-	990.0 s	5.0 s
7093	Enable	Enable	OFF	-	ON	ON

6940 Alarm LED function

No.	Setting		Min. setting	Max. setting	Factory setting
6941	Alarm LED function	Customer	Red / Red (Warning / Shutdown)	Amber / Red (Warning / Shutdown)	Red / Red (Warning / Shutdown)

9110 Password

No.	Setting		Min. setting	Max. setting	Factory setting
9116	Password	Customer	0	9999	2000
9117	Password	Service	0	9999	2001

User password

If you forget the password, contact DEIF Support for details.

9020 Service port

No.	Setting		Min. setting	Max. setting	Factory setting
9021	Service port	Protocol	RTU	ASCII	RTU

10320-10370 GSM pin code and dial-up numbers

No.	Setting		Min. setting	Max. setting	Factory setting
10320	GSM	GSM pin code	0	9999	0
10331	GSM	SMS telephone no.	0	+999999999999999	+4511223344
10332	GSM	Enable	OFF	ON	OFF
10341	GSM	SMS telephone no.	0	+999999999999999	+4511223344
10342	GSM	Enable	OFF	ON	OFF
10351	GSM	SMS telephone no.	0	+999999999999999	+4511223344
10352	GSM	Enable	OFF	ON	OFF
10361	GSM	SMS telephone no.	0	+999999999999999	+4511223344
10362	GSM	Enable	OFF	ON	OFF
10371	GSM	SMS telephone no.	0	+999999999999999	+4511223344
10372	GSM	Enable	OFF	ON	OFF



A telephone number set to 0 means not used. The prefix + and country code must always be entered. E.g. +45 for Denmark.

10460-10620 Fuel level config. sensor

No.	Setting		Min. setting	Max. setting	Factory setting
10460	Fuel level type	Type	1	3	1
10470	VDO 1	Fuel level Input 1	0 ohm	180 ohm	0 ohm
10480	VDO 1	Fuel level Output 1	0%	150%	40%
10490	VDO 1	Fuel level Input 2	0 ohm	180 ohm	40 ohm
10500	VDO 1	Fuel level Output 2	0%	150%	50%
10510	VDO 1	Fuel level Input 3	0 ohm	180 ohm	50 ohm
10520	VDO 1	Fuel level Output 3	0%	150%	60%
10530	VDO 1	Fuel level Input 4	0 ohm	180 ohm	60 ohm
10540	VDO 1	Fuel level Output 4	0%	150%	80%
10550	VDO 1	Fuel level Input 5	0 ohm	180 ohm	70 ohm
10560	VDO 1	Fuel level Output 5	0%	150%	100%
10570	VDO 1	Fuel level Input 6	0 ohm	180 ohm	80 ohm
10580	VDO 1	Fuel level Output 6	0%	150%	110%
10590	VDO 1	Fuel level Input 7	0 ohm	180 ohm	90 ohm
10600	VDO 1	Fuel level Output 7	0%	150%	90%
10610	VDO 1	Fuel level Input 8	0 ohm	180 ohm	100 ohm
10620	VDO 1	Fuel level Output 8	0%	150%	120%

10630-10790 Oil pressure config. sensor

No.	Setting		Min. setting	Max. setting	Factory setting
10630	Oil pressure type	Type	1	4	1
10640	VDO 2	Oil pressure Input 1	0 ohm	240 ohm	30 ohm
10650	VDO 2	Oil pressure Output 1	0.0 bar	15.0 bar	4.0 bar
10660	VDO 2	Oil pressure Input 2	0 ohm	240 ohm	60 ohm
10670	VDO 2	Oil pressure Output 2	0.0 bar	15.0 bar	5.0 bar
10680	VDO 2	Oil pressure Input 3	0 ohm	240 ohm	90 ohm
10690	VDO 2	Oil pressure Output 3	0.0 bar	15.0 bar	6.0 bar
10700	VDO 2	Oil pressure Input 4	0 ohm	240 ohm	120 ohm
10710	VDO 2	Oil pressure Output 4	0.0 bar	15.0 bar	8.0 bar
10720	VDO 2	Oil pressure Input 5	0 ohm	240 ohm	150 ohm
10730	VDO 2	Oil pressure Output 5	0.0 bar	15.0 bar	10.0 bar
10740	VDO 2	Oil pressure Input 6	0 ohm	240 ohm	180 ohm
10750	VDO 2	Oil pressure Output 6	0.0 bar	15.0 bar	11.0 bar
10760	VDO 2	Oil pressure Input 7	0 ohm	240 ohm	210 ohm
10770	VDO 2	Oil pressure Output 7	0.0 bar	15.0 bar	11.5 bar
10780	VDO 2	Oil pressure Input 8	0 ohm	240 ohm	240 ohm
10790	VDO 2	Oil pressure Output 8	0.0 bar	15.0 bar	15.0 bar

10800-10950 Water temp. config. sensor

No.	Setting		Min. setting	Max. setting	Factory setting
10800	VDO	Type	1	5	1
10810	VDO 3	Water temp. Input 1	0 ohm	2500 ohm	0 ohm
10820	VDO 3	Water temp. Output 1	0	150	0°C
10830	VDO 3	Water temp. Input 2	0 ohm	2500 ohm	40 ohm
10840	VDO 3	Water temp. Output 2	0	150	40°C
10850	VDO 3	Water temp. Input 3	0 ohm	2500 ohm	60 ohm
10860	VDO 3	Water temp. Output 3	0	150	60°C
10870	VDO 3	Water temp. Input 4	0 ohm	2500 ohm	80 ohm
10880	VDO 3	Water temp. Output 4	0	150	80°C
10890	VDO 3	Water temp. Input 5	0 ohm	2500 ohm	90 ohm
10900	VDO 3	Water temp. Output 5	0	150	90°C
10910	VDO 3	Water temp. Input 6	0 ohm	2500 ohm	100 ohm
10920	VDO 3	Water temp. Output 6	0	150	100°C
10930	VDO 3	Water temp. Input 7	0 ohm	2500 ohm	120 ohm
10940	VDO 3	Water temp. Output 7	0	150	120°C
10950	VDO 3	Water temp. Input 8	0 ohm	2500 ohm	150 ohm
10960	VDO 3	Water temp. Output 8	0	150	150°C

10970-11000 Engineering units

No.	Setting		Min. setting	Max. setting	Factory setting
10971	Unit	Set point	C / bar	F / psi	C / bar

10980 Configurable input selection

No.	Setting		Min. setting	Max. setting	Factory setting
10980	Conf inp 1	Set point	VDO	Binary	VDO
10990	Conf inp 2	Set point	VDO	Binary	VDO
11000	Conf inp 3	Set point	VDO	Binary	VDO

Possible selections:

- VDO
- 4...20mA
- 0...20mA
- Binary



It is possible to combine VDO inputs with binary inputs and (0)4...20mA inputs in a mix.

DEIF A/S reserves the right to change any of the above